


## ACCESSIBILITY Menu

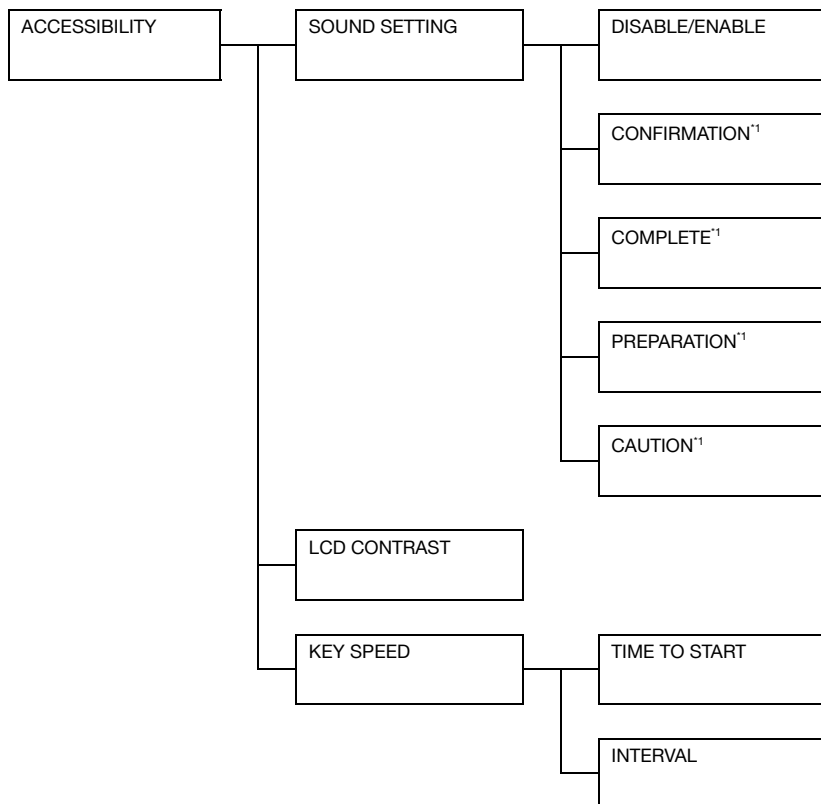


<sup>1</sup> This menu item appears when [ACCESSIBILITY]/[SOUND SETTING] is set to [ENABLE].



Manufacturer's default settings appear in bold.

[SOUND SETTING]	[DISABLE/ENABLE]	Settings	[DISABLE] / <b>[ENABLE]</b>
		Select if operation sounds are to be produced. To produce sounds, select [ENABLE]. To not produce sounds, select [DISABLE].	

	[CONFIRMATION]	[VALID INPUT]	Settings	[OFF] / <b>[LOW]</b> / [MIDDLE] / [HIGH]
			Select whether sounds are produced when keys are pressed to enter data.	
		[INVALID INPUT]	Settings	[OFF] / <b>[LOW]</b> / [MIDDLE] / [HIGH]
	Select whether sounds are produced when keys are pressed to enter invalid data.			
	[BASE INPUT]	Settings	[OFF] / <b>[LOW]</b> / [MIDDLE] / [HIGH]	
		Select whether sounds are produced when the default setting is selected while scrolling through the settings.		
[COMPLETE]	[PRINT]	Settings	[OFF] / <b>[LOW]</b> / [MIDDLE] / [HIGH]	
		Select whether sounds are produced when printing is completed successfully.		
	[FAX COMM.]	Settings	[OFF] / <b>[LOW]</b> / [MIDDLE] / [HIGH]	
		Select whether sounds are produced when a communication is completed successfully.		
[PREPARATION]		Settings	[OFF] / <b>[LOW]</b> / [MIDDLE] / [HIGH]	
		Select if sounds are to be produced when machine preparations are finished.		
[CAUTION]	[LOW CAUTION 1]	Settings	[OFF] / <b>[LOW]</b> / [MIDDLE] / [HIGH]	
		Select whether sounds are produced when a message appears in the message window, warning that it is almost time to replace consumables or a replaceable part.		
	[LOW CAUTION 2]	Settings	[OFF] / <b>[LOW]</b> / [MIDDLE] / [HIGH]	
		Select whether sounds are produced when the user performs an incorrect operation.		

	[LOW CAUTION 3]	Settings	[OFF] / <b>[LOW]</b> / [MIDDLE] / [HIGH]
		Select whether sounds are produced when an error occurs that can be corrected by the user by referring to the message that appeared or the User's Guide.	
	[HIGH CAUTION]	Settings	[OFF] / <b>[LOW]</b> / [MIDDLE] / [HIGH]
		Select whether sounds are produced when an error occurs that cannot be corrected by the user or requires a service representative.	
[LCD CONTRAST]		Settings	(LIGHT)  (DARK)
		Specify the brightness of the message window.	
[KEY SPEED]	[TIME TO START]	Settings	[0.1sec] / [0.3sec] / [0.5sec] / <b>[1.0sec]</b> / [1.5sec] / [2.0sec] / [2.5sec] / [3.0sec]
		Specify the length of time until the cursor begins to move continuously when a key is held down.	
	[INTERVAL]	Settings	<b>[0.1sec]</b> / [0.3sec] / [0.5sec] / [1.0sec] / [1.5sec] / [2.0sec] / [2.5sec] / [3.0sec]
		Specify the length of time until the cursor continuously moves between settings or characters.	

---