




ADMIN. MANAGEMENT Menu




The [ADMIN. MANAGEMENT] menu is accessible only by the administrator. To display the settings for this menu, select [ADMIN. MANAGEMENT], use the keypad to type in the 6-digit administrator access code (default: **000000**), and then press the **Select** key.

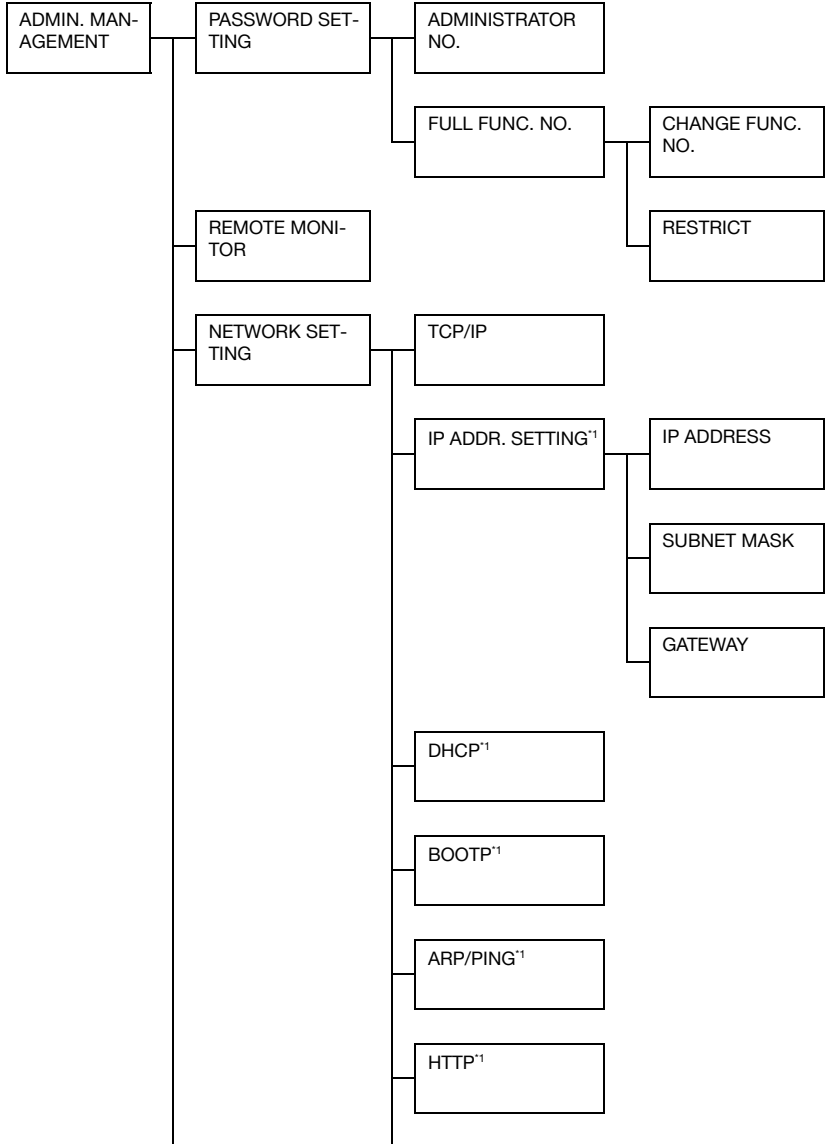

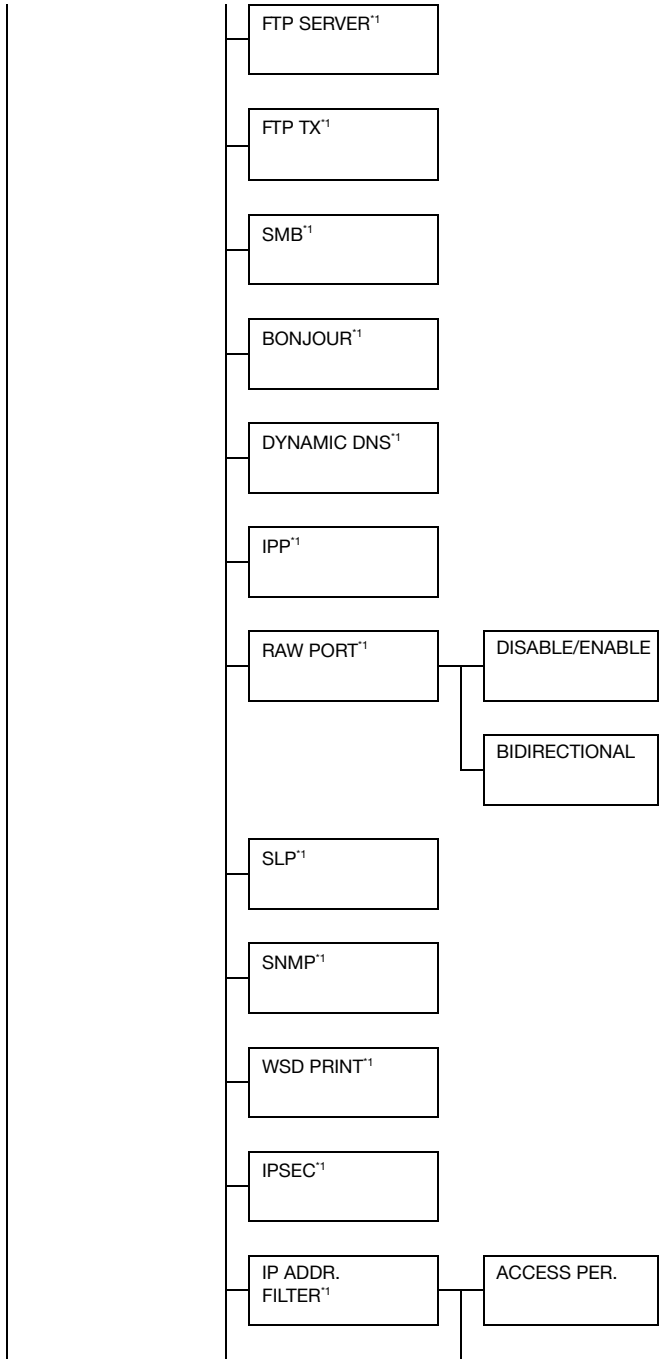

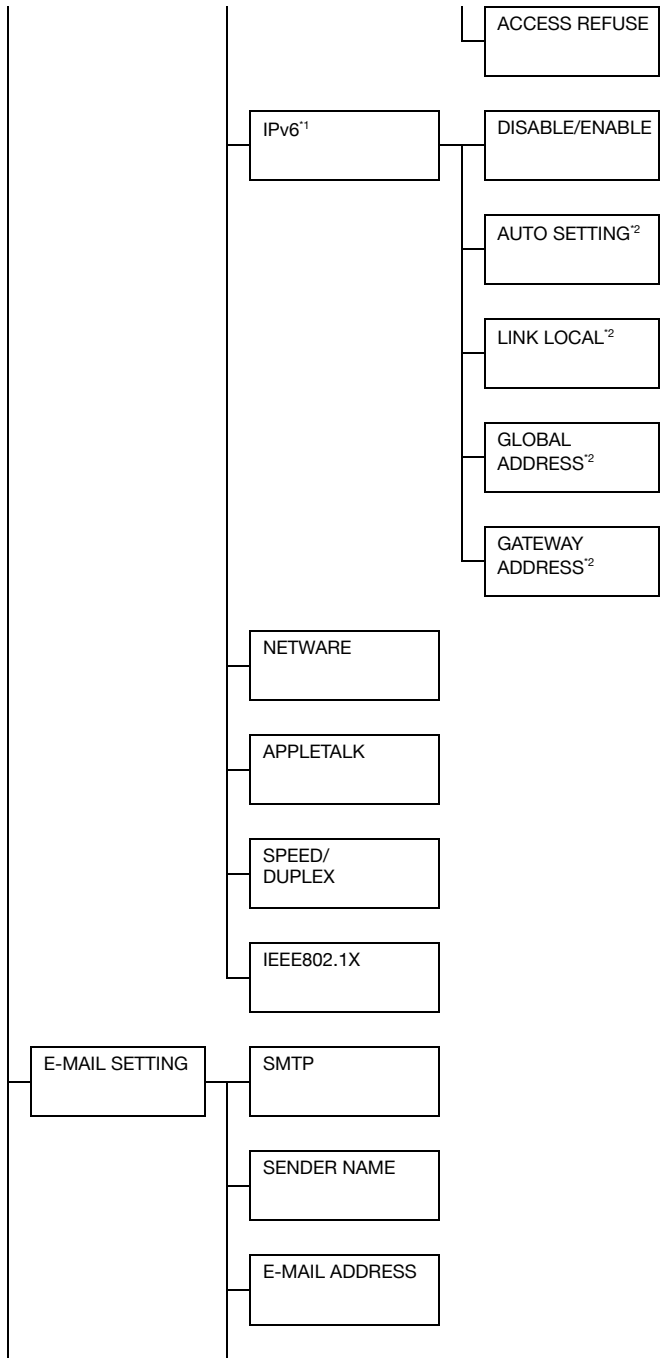

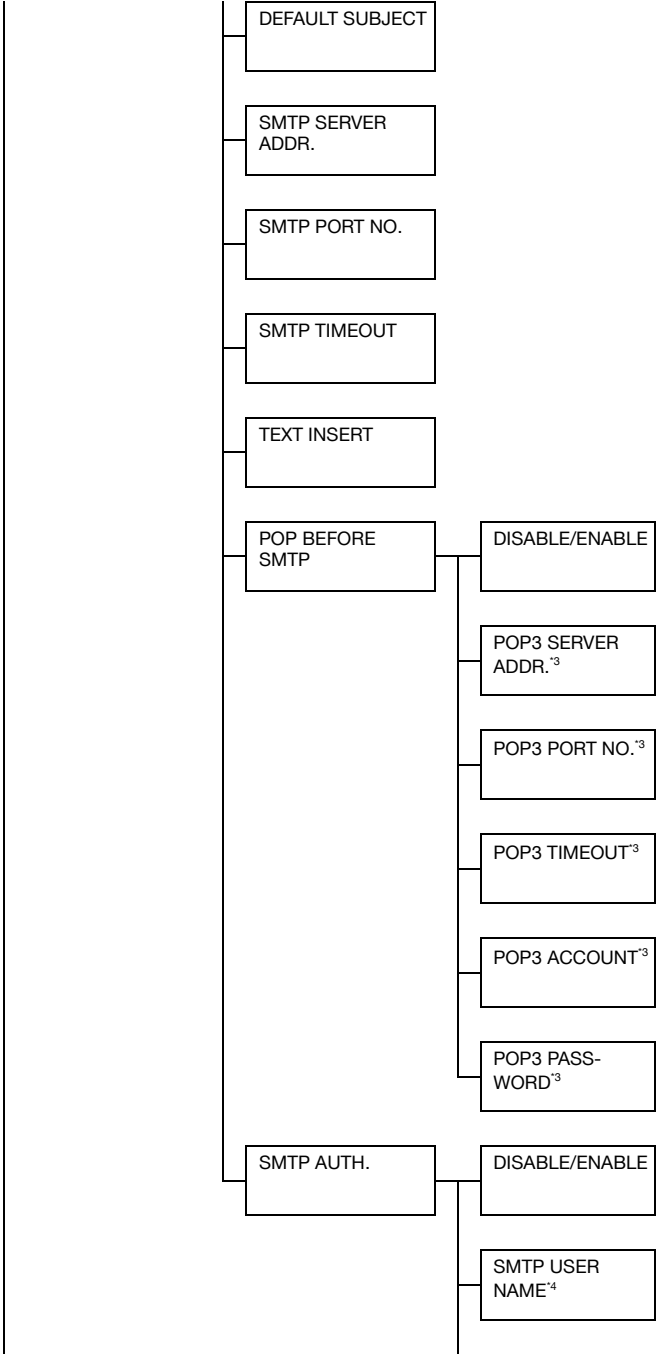

DEFAULT SUBJECT

SMTP SERVER ADDR.

SMTP PORT NO.

SMTP TIMEOUT

TEXT INSERT

POP BEFORE SMTP

DISABLE/ENABLE

POP3 SERVER ADDR.³

POP3 PORT NO.³

POP3 TIMEOUT³

POP3 ACCOUNT³

POP3 PASS-WORD³

SMTP AUTH.

DISABLE/ENABLE

SMTP USER NAME⁴

SMTP PASS-
WORD⁴

LDAP SETTING

DISABLE/ENABLE

LDAP SERVER
ADDR.⁵

LDAP
PORT NO.⁵

SSL SETTING⁵

SEARCH BASE⁵

ATTRIBUTE⁵

SEARCH
METHOD⁵


LDAP
TIMEOUT⁵


MAX.SEARCH
RESULTS⁵

AUTHENTICATION⁵

LDAP ACCOUNT⁵

LDAP PASSWORD⁵

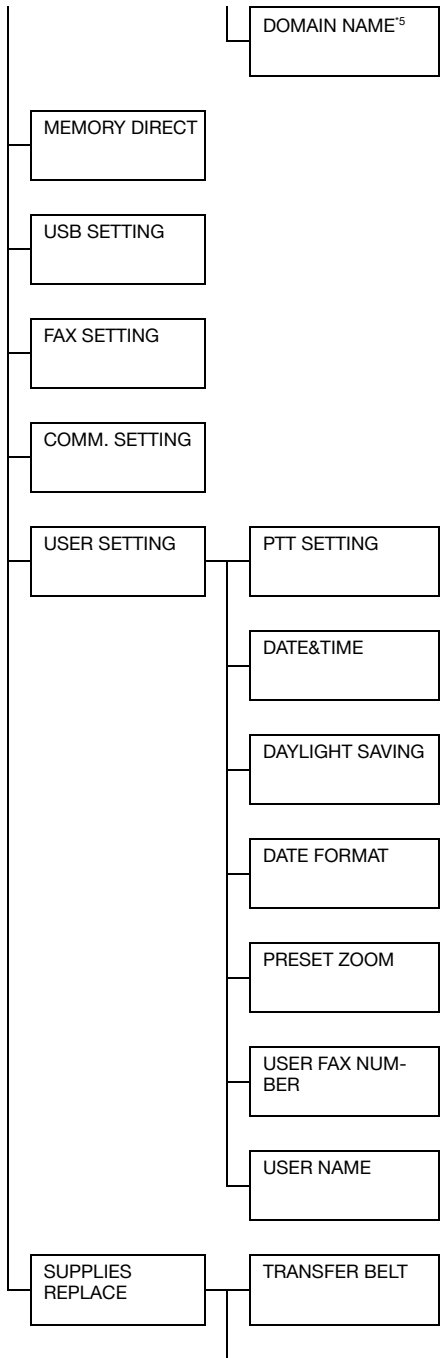

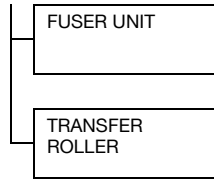

^{*1} This menu item appears when [ADMIN. MANAGEMENT]/[NETWORK SETTING]/[TCP/IP] is set to [ENABLE].

^{*2} This menu item appears when [ADMIN. MANAGEMENT]/[NETWORK SETTING]/[IPv6]/[DISABLE/ENABLE] is set to [ENABLE].

^{*3} This menu item appears when [ADMIN. MANAGEMENT]/[E-MAIL SETTING]/[POP BEFORE SMTP]/[DISABLE/ENABLE] is set to [ENABLE].



^{*4} This menu item appears when [ADMIN. MANAGEMENT]/[E-MAIL SETTING]/[SMTP AUTH.]/[DISABLE/ENABLE] is set to [ENABLE].


^{*5} This menu item appears when [ADMIN. MANAGEMENT]/[LDAP SETTING]/[DISABLE/ENABLE] is set to [ENABLE].



Manufacturer's default settings appear in bold.

[PASS-WORD SETTING]	[ADMINISTRATOR NO.]		Specify the new administrator access code.	
	[FULL FUNC. NO.]	[CHANGE FUNC. NO.]	Specify the function number for using restricted functions. This is the password for using the functions.	
		[RESTR ICT]	[COLOR COPY]	Settings [ALLOW] / [RESTRICT] Select whether or not to restrict the Color Copy function.
			[FAX TX]	Settings [ALLOW] / [RESTRICT] Select whether or not to restrict the fax transmission function (Memory TX, Direct TX, Manual TX, Manual Polling RX).
			[SCAN TO E-MAIL]	Settings [ALLOW] / [RESTRICT] Select whether or not to restrict the Scan to E-mail function.
			[SCAN TO USB]	Settings [ALLOW] / [RESTRICT] Select whether or not to restrict the Scan to USB function.
			[SCAN TO SERVER]	Settings [ALLOW] / [RESTRICT] Select whether or not to restrict the Scan to Server function.

[REMOTE MONITOR]		Settings	[OFF] / [ON]	
		<p>Select whether or not setting remote monitor.</p> <p>If [ON] is selected, technical support can access the menu mode.</p> <p>If [OFF] is selected, technical support cannot access the menu mode.</p> <p> <i>This setting is for technical support uses. Change the setting only when it is necessary.</i></p> <p> <i>If this machine is connected with a USB cable, remote monitoring cannot be used.</i></p>		
[NET- WORK SET- TING]	[TCP/IP]		Settings	[DISABLE] / [ENABLE]
				Select the setting for connecting to this machine through a network.
	[IP ADDR. SET- TING]	[IP ADDRESS]		Type in the setting for [IP ADDRESS]. The default setting is [0.0.0.0].
		[SUBNET MASK]		Type in the setting for [SUBNET MASK]. The default setting is [0.0.0.0].
		[GATEWAY]		Type in the address for [GATEWAY]. The default setting is [0.0.0.0].
[DHCP]		Settings	[DISABLE] / [ENABLE]	
			If there is a DHCP server on the network, specify whether the IP address and other network information is automatically assigned by the DHCP server.	


[BOOTP]	Settings	[DISABLE] / [ENABLE]
	If there is a BOOTP server on the network, specify whether the IP address and other network information is automatically assigned by the BOOTP server.	
[ARP/PING]	Settings	[DISABLE] / [ENABLE]
	Select whether or not the ARP/PING command is used when the IP address is assigned.	
[HTTP]	Settings	[DISABLE] / [ENABLE]
	Select whether or not to enable HTTP.	
[FTP SERVER]	Settings	[DISABLE] / [ENABLE]
	Select whether or not to enable the FTP server.	
[FTP TX]	Settings	[DISABLE] / [ENABLE]
	Select whether or not to enable the FTP client.	
[SMB]	Settings	[DISABLE] / [ENABLE]
	Select whether or not to enable SMB.	
[BONJOUR]	Settings	[DISABLE] / [ENABLE]
	Select whether or not to enable Bonjour.	
[DYNAMIC DNS]	Settings	[DISABLE] / [ENABLE]
	Select whether or not to enable Dynamic DNS.	
[IPP]	Settings	[DISABLE] / [ENABLE]
	Select whether or not to enable IPP.	
	 <i>If [HTTP] is set to [DISABLE], [IPP] cannot be set.</i>	

[RAW PORT]	[DISABLE/ENABLE]	Settings	[DISABLE] / [ENABLE]
		Select whether or not to enable the raw port.	
	[BIDIRECTIONAL]	Settings	[DISABLE] / [ENABLE]
		Select whether or not to enable raw port bidirectional communication.	
[SLP]		Settings	[DISABLE] / [ENABLE]
		Select whether or not to enable SLP.	
[SNMP]		Settings	[DISABLE] / [ENABLE]
		Select whether or not to enable SNMP.	
[WSD PRINT]		Settings	[DISABLE] / [ENABLE]
		Select whether or not to enable WSD printing.	
[IPSEC]		Settings	[DISABLE] / [ENABLE]
		Select whether or not to enable IPsec.	
[IP ADDR. FILTER]	[ACCESS PER.]	Settings	[DISABLE] / [ENABLE]
		Specify access permissions for IP address filtering.	
	[ACCESS REFUSE]	Settings	[DISABLE] / [ENABLE]
		Specify access blocking for IP address filtering.	

[IPv6]	[DISABLE/ ENABLE]	Settings	[DISABLE] / [ENABLE]
		Select whether or not to enable IPv6.	
	[AUTO SETTING]	Settings	[YES] / [NO]
		Select whether or not to enable the IPv6 auto setting.	
	[LINK LOCAL]	Displays the link-local address.	
	[GLOBAL ADDRESS]	Displays the global address.	
	[GATEWAY ADDRESS]	Displays the gateway address.	
[NETWARE]		Settings	[DISABLE] / [ENABLE]
		Select whether or not to enable NetWare.	
[APPLETALK]		Settings	[DISABLE] / [ENABLE]
		Select whether or not to enable AppleTalk.	
[SPEED/DUPLEX]		Settings	[AUTO] / [10BASE FULL] / [10BASE HALF] / [100BASE FULL] / [100BASE HALF] / [1000BASE FULL]
		Specifies the transmission speed for the network and the transmission method for bi-directional transmission.	
[IEEE802.1X]		Settings	[DISABLE] / [ENABLE]
		Select whether or not to enable IEEE802.1X.	

[E-MAIL SETTING]	[SMTP]	Settings	[DISABLE] / [ENABLE]
		Select whether to enable or disable e-mail transmission operations for this machine.	
	[SENDER NAME]	Specify the name of the e-mail sender (up to 20 characters) used for network scanning. The default setting is [bizhub_C25] .	
	[E-MAIL ADDRESS]	Specify the e-mail address (up to 64 characters) of the e-mail sender used for network scanning.	
	[DEFAULT SUBJECT]	Specify the subject (up to 20 characters) of the e-mail message used for network scanning. The default setting is [from bizhub C25] .	
	[SMTP SERVER ADDR.]	Specify the IP address or host name (up to 64 characters) for the SMTP server. The default setting is [0.0.0.0] .	
	[SMTP PORT NO.]	Settings	1-65535 (Default: [25])
		Specify the port number communicating with the SMTP server.	
[SMTP TIMEOUT]	Settings	30-300 sec (Default: [60 sec])	
	Select the amount of time (in seconds) until the connection with the SMTP server times out.		
[TEXT INSERT]	Settings	[OFF] / [ON]	
	Select whether or not the specified text is inserted into the e-mail message.		

	[POP BEFORE SMTP]	[DISABLE/ENABLE]	Settings	[DISABLE] / [ENABLE]
			Select whether or not to enable POP Before SMTP. If [ENABLE] is selected, specify the time (between 0 and 60 seconds). The default setting is [1sec] .	
		[POP3 SERVER ADDR.]	Specify the host name or IP address for the POP3 server used for authentication with POP Before SMTP. The default setting is [0.0.0.0] .	
		[POP3 PORT NO.]	Settings	1-65535 (Default: [110])
			Specify the port number used for communicating with the POP3 server.	
		[POP3 TIMEOUT]	Settings	30-300 sec (Default: [30 sec])
			Select the amount of time (in seconds) until the connection with the POP3 server times out.	
	[POP3 ACCOUNT]	Specify the user name (up to 63 characters) used for authentication with POP3 server.		
	[POP3 PASSWORD]	Specify the password (up to 15 characters) used for authentication with POP3 server.		
[SMTP AUTH.]	[DISABLE/ENABLE]	Settings	[DISABLE] / [ENABLE]	
		Select whether or not to enable SMTP authentication.		
	[SMTP USER NAME]	Specify the user name (up to 63 characters) used for SMTP authentication.		
	[SMTP PASSWORD]	Specify the password (up to 15 characters) used for SMTP authentication.		

[LDAP SETTING]	[DISABLE/ENABLE]	Settings	[DISABLE] / [ENABLE]
		Select whether or not to enable the LDAP function.	
	[LDAP SERVER ADDR.]	Specify the address (up to 64 characters) of the LDAP server. The default setting is [0.0.0.0] .	
[LDAP PORT NO.]	Settings	1-65535 (Default: [389])	
		Specify the port number of the LDAP server.  <i>The default setting is [636] when [SSL SETTING] is set to [ENABLE].</i>	
[SSL SETTING]	Settings	[DISABLE] / [ENABLE]	
		Select whether or not to enable SSL.	
	[SEARCH BASE]	Specify the search starting point (up to 64 characters) in a hierarchical structure arranged on the LDAP server.	
	[ATTRIBUTE]	The conditions for searches can be specified as a name or e-mail address (up to 32 characters). The default setting is [cn] .	
[SEARCH METHOD]	Settings	[BEGIN] / [CONTAIN] / [END]	
		The specified characters can be searched for at the beginning, within or at the end.	
[LDAP TIMEOUT]	Settings	5-300 sec (Default: [60 sec])	
		Specify the maximum wait time during a search.	
[MAX.SEARCH RESULTS]	Settings	5-100 (Default: [100])	
		Specify the maximum number of destinations displayed after a search.	

[AUTHENTICATION]	Settings	[ANONYMOUS] / [SIMPLE] / [DIGEST-MD5] / [GSS-SPNEGO] / [NTLMv2]
	Select the authentication method used for logging on to the LDAP server.	
	[LDAP ACCOUNT]	Specify the account (up to 64 characters) used to connect to the LDAP server.
	[LDAP PASSWORD]	Specify the password (up to 32 characters) used to connect to the LDAP server.
[DOMAIN NAME]	Specify the domain name (up to 64 characters) used to connect to the LDAP server.	
[MEMORY DIRECT]	Settings	[DISABLE] / [ENABLE]
		Select whether or not to enable the Memory Direct function.
[USB SETTING]	Settings	[Windows] / [Mac]
		Select the operating system of the PC to which this machine is connected with a USB cable.
[FAX SETTING]	For details, refer to the [Facsimile User's Guide] on the Documentation CD/DVD.	
[COMM. SETTING]	For details, refer to the [Facsimile User's Guide] on the Documentation CD/DVD.	

[USER SETTING]	[PTT SETTING]	Settings	[ARGENTINA] / [AUSTRALIA] / [AUSTRIA] / [BELGIUM] / [BRAZIL] / [CANADA] / [CHINA] / [CZECH] / [DENMARK] / [EUROPE] / [FINLAND] / [FRANCE] / [GERMANY] / [GREECE] / [HONG KONG] / [HUNGARY] / [IRELAND] / [ISRAEL] / [ITALY] / [JAPAN] / [KOREA] / [MALAYSIA] / [MEXICO] / [THE NETHERLANDS] / [NEW ZEALAND] / [NORWAY] / [PHILIPPINES] / [POLAND] / [PORTUGAL] / [RUSSIA] / [SAUDI ARABIA] / [SINGAPORE] / [SLOVAKIA] / [SOUTH AFRICA] / [SPAIN] / [SWEDEN] / [SWITZERLAND] / [TAIWAN] / [TURKEY] / [U.S.A] / [UNITED KINGDOM] / [VIETNAM]
			Select the country where this machine is installed.
	[DATE&TIME]	Settings	[TIME]: 00:00-23:59 (Default: [00:00]) [DATE]: '08/01/01-'32/12/31 (Default: ['08/01/01]) [ZONE]: GMT+12:00-GMT-12:00 (in 30-minute intervals) (Default: [GMT+00:00])
			Use the keypad to specify the current date, time and time zone.

	[DAYLIGHT SAVING]	Settings	[OFF] / [ON] (1-150 min (Default: [60 min]))
		<p>Select whether or not daylight saving time is applied.</p> <p>If [ON] is selected, specify how many minutes the time will be adjusted.</p>	
	[DATE FORMAT]	Settings	[MM/DD/YY] / [DD/MM/YY] / [YY/MM/DD]
		Select the display format for reports and lists.	
	[PRESET ZOOM]	Settings	[INCH] / [METRIC]
	<p>Select the measurement units for the preset zoom ratios.</p> <p>The default setting is [INCH] for USA and Canada, and [METRIC] for other countries.</p>		
	[USER FAX NUMBER]	Enter your fax number. A maximum of 20 characters (consisting of numbers, spaces, + and -) can be entered. The specified number is printed in the header of outgoing faxes. The default setting is blank.	
	[USER NAME]	Enter your name. A maximum of 32 characters can be entered. The specified name is printed in the header of outgoing faxes. The default setting is blank.	
[SUP-PLIES REPLACEMENT]	[TRANSFER BELT]	Replace the counter when the transfer belt unit is replaced with new one.	
	[FUSER UNIT]	Replace the counter when the fuser unit is replaced with new one.	
	[TRANSFER ROLLER]	Replace the counter when the transfer roller is replaced with new one.	