[LIST OF FILES]	Select the file that you wish to output, and then press the Select key.			
	If the file to be printed is in a folder, select the folder, and then press the Select key.			
	[PAPER SELECT]	Settings [LETTER] / [LEGAL] / [EXECUTIVE] / [A4] / [A5] / [A6] / [B5(JIS)] / [B6(JIS)] / [GOVT LETTER] / [STATEMENT] / [FOLIO] / [SP FOLIO] / [UK QUARTO] / [FOOLSCAP] / [GOVT LEGAL] / [16K] / [PHOTO 4×6] / [KAI 16] / [KAI 32] / [ENV C6] / [ENV DL/ENV MONARCH] / [ENV CHOU#3] / [ENV CHOU#4] / [B5(ISO)] / [ENV #10] / [JPOST 100×148] / [JPOST-D 148×200] / [8 1/8×13 1/4] / [8 1/2×13 1/2] / [CUSTOM]		
		Change the size of the paper.		
		The default setting is the setting selected for [PS/PCL PRINT] / [SYS DEFAULT MENU] / [PAPER] / [DEFAULT PAPER] / [PAPER SIZE].		
		Depending on the setting selected for [UTILITY] / [ADMIN. MANAGEMENT] / [USER SETTING] / [PRESET ZOOM], [PHOTO 4×6] may change to [PHOTO 10×15].		
		This menu item does not appear if the selected file is PDF and XPS file.		
	[SIMPLEX/ DUPLEX]	Settings [1-SIDE] / [2-SIDE]		
		If [2-SIDE] is selected, you can get duplex printing.		
		If [LONG EDGE] is selected, the page will be printed on both sides of the paper for long edge binding.		
		If [SHORT EDGE] is selected, the page will be printed on both sides of the paper for short edge binding.		
		If [OFF] is selected, duplex printing is not per- formed.		

	[COPY QUANTITY]	Settings	1-9999 (Default: [1])	
		Specify the number of copies to be printed (between 1 and 9999).		
		This menu item does not appear if the selected file is XPS file.		
[Co ISI	[COPY FIN- ISHING]	Settings	[NON-SORT] / [SORT]	
		Select whether to collate the copies.		
		If [NON-SORT] is selected, collated printing is not performed.		
		If [SORT] is selected, collated printing is performed.		
[TYPE OF FILES]	Settings	[PDF,XPS,JPEG,TIFF] / [PDF,XPS]		
	Select the type of files to be displayed.			