


REPORTING Menu

Specify report settings by selecting [REPORTING] in the [UTILITY] menu.

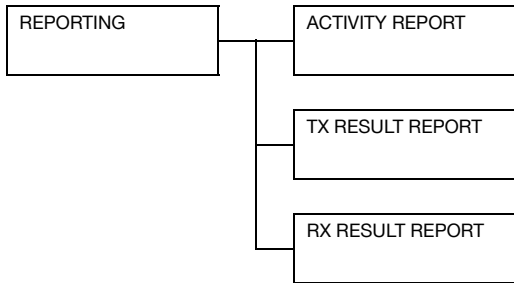

Manufacturer's default settings appear in bold.

[ACTIVITY REPORT]	Settings	[OFF] / [ON]
	After every 60 transmissions/receptions, a report can be printed to show the results of the transmissions/receptions. Select whether the report is printed automatically when the 60th transmission/reception is reached.	
[TX RESULT REPORT]	Settings	[ON] / [ON(ERROR)] / [OFF]
	<p>Select whether the report showing the result of a transmission is printed automatically after the transmission is finished.</p> <ul style="list-style-type: none"> • [ON]: Prints the report after each transmission. • [ON(ERROR)]: Prints the error details together with a reduced image of the first page of the document when a transmission error has occurred. • [OFF]: Does not print the report after each transmission, even if an error has occurred. <p>The transmission result report is normally printed after a broadcast transmission.</p>	

[RX RESULT REPORT]	Settings	[ON] / [ON(ERROR)] / [OFF]
	<p>Select whether the report showing the result of a reception is printed automatically after the reception is finished.</p> <ul style="list-style-type: none">● [ON]: Prints the report after each reception.● [ON(ERROR)]: Prints the report after a reception only if an error occurred.● [OFF]: Does not print the report after each reception, even if an error has occurred.	
