

# Print Page

This page allows you to check the settings for printing when there is no PDL printer driver.



Log out

System Job **Print** Scan

**▼ Default Settings**

- ▶ General Settings
- ▶ Paper Source Settings
- ▶ Tray Mapping Settings
- ▶ PCL Settings
- ▶ PS Settings
- ▶ XPS Settings
- ▶ Print Quality Settings
- ▶ Font/Form
- ▶ Report Types
- ▶ Direct Print

**General Settings**

PDL	Auto
Paper Source	Tray2
Duplex	Off
Output Tray	Main Tray
Copies	1
Paper Size	Letter
Paper Type	Plain Paper
Collate	Off

## Default Settings

### General Settings (shown above)

The [Print] - [Default Settings] - [General Settings] window provides the following information.

Item	Description
[PDL]	Indicates default language to be selected.
[Paper Source]	The paper tray that is normally used is indicated.
[Duplex]	If [Long-Edge Binding] is indicated, the pages will be printed on both sides of the paper for long-edge binding.  If [Short-Edge Binding] is indicated, the pages will be printed on both sides of the paper for short-edge binding.
[Output Tray]	Displays the name of the output tray.

Item	Description
[Copies]	Indicates the default setting for number of copies to be printed.
[Paper Size]	Indicates the default setting for the size of paper.
[Width]	Indicates the paper width when [Paper Size] is set to [Custom Size].
[Length]	Indicates the paper length when [Paper Size] is set to [Custom Size].
[Paper Type]	Indicates the default setting for the type of paper.
[Collate]	<p>If [On] is indicated, all pages in a copy of the document can be printed before printing the next copy.</p> <p>If [Off] is indicated, all copies of the document are not printed separately.</p> <p> <i>This menu item appears only if an optional Hard Disk Kit HD-P03 or a CompactFlash card of 1 GB or more is installed.</i></p>

# Paper Source Settings



Log out

System
Job
Print
Scan

---

- ▼ Default Settings
- ▶ General Settings
- ▶ Paper Source Settings
- ▶ Tray Mapping Settings
- ▶ PCL Settings
- ▶ PS Settings
- ▶ XPS Settings
- ▶ Print Quality Settings
- ▶ Font/Form
- ▶ Report Types
- ▶ Direct Print

**Paper Source Settings**

**Tray1**

Paper Size		A4
Paper Type		Plain Paper

**Tray2**

Paper Size		A4
Paper Type		Plain Paper

**Any Tray Setting**

Tray1		
	Paper Size	Off
	Paper Type	Off
Tray2		
	Paper Size	Off
	Paper Type	Off

**Tray Chaining**

Tray Chaining		Enable
---------------	--	--------

The [Print] - [Default Settings] - [Paper Source Settings] window provides the following information.

Item		Description
[Tray1]	[Paper Size]	Indicates the setting for the size of paper loaded into [Tray1].
	[Width]	Indicates the paper width when [Paper Size] is set to [Custom Size].
	[Length]	Indicates the paper width when [Paper Size] is set to [Custom Size].
	[Paper Type]	Indicates the setting for the type of paper loaded into [Tray1].

Item		Description	
[Tray2]	[Paper Size]	Indicates the setting for the size of paper loaded into [Tray2].	
	[Width]	Indicates the paper width when [Paper Size] is set to [Custom Size].	
	[Length]	Indicates the paper width when [Paper Size] is set to [Custom Size].	
	[Paper Type]	Indicates the setting for the type of paper loaded into [Tray2].	
[Tray3] This item appears only if an optional lower feeder unit is installed.	[Paper Size]	Indicates the setting for the size of paper loaded into [Tray3].	
	[Paper Type]	Indicates the setting for the type of paper loaded into [Tray3].	
[Any Tray Setting]	[Tray1]	[Paper Size]	Indicates whether Any Paper Size setting for [Tray1] is enabled or disabled.
		[Paper Type]	Indicates whether Any Media Type setting for [Tray1] is enabled or disabled.
	[Tray2]	[Paper Size]	Indicates whether Any Paper Size setting for [Tray2] is enabled or disabled.
		[Paper Type]	Indicates whether Any Media Type setting for [Tray2] is enabled or disabled.
	[Tray3] This item appears only if an optional lower feeder unit is installed.	[Paper Type]	Indicates whether Any Media Type setting for [Tray3] is enabled or disabled.
	[Tray Chaining]		<p>If [Enable] is indicated and the specified paper tray runs out of paper during printing, a paper tray loaded with paper of the same size is automatically selected so printing can continue.</p> <p>If [Disable] is indicated and the specified paper tray runs out of paper, printing stops.</p>

# Tray Mapping Settings



Log out

System
Job
Print
Scan

---

**▼ Default Settings**

- ▶ General Settings
- ▶ Paper Source Settings
- ▶ Tray Mapping Settings
- ▶ PCL Settings
- ▶ PS Settings
- ▶ XPS Settings
- ▶ Print Quality Settings
- ▶ Font/Form
- ▶ Report Types
- ▶ Direct Print

**Tray Mapping Settings**

Tray Mapping Mode	Off
Logical Tray 0	Physical Tray 2
Logical Tray 1	Physical Tray 1
Logical Tray 2	Physical Tray 2
Logical Tray 3	Physical Tray 2
Logical Tray 4	Physical Tray 2
Logical Tray 5	Physical Tray 2
Logical Tray 6	Physical Tray 2
Logical Tray 7	Physical Tray 2
Logical Tray 8	Physical Tray 2
Logical Tray 9	Physical Tray 2

---

The [Print] - [Default Settings] - [Tray Mapping Settings] window provides the following information.

Item	Description
[Tray Mapping Mode]	<p>If [On] is indicated, Tray Mapping function is used.</p> <p>If [Off] is indicated, Tray Mapping function is not used.</p>
[Logical Tray 0-9]	Indicates the tray that is used for printing when a print job is received from another manufacturer's printer driver.

## PCL Settings



Log out

System Job Print Scan

▼ Default Settings

- ▶ General Settings
- ▶ Paper Source Settings
- ▶ Tray Mapping Settings
- ▶ PCL Settings
- ▶ PS Settings
- ▶ XPS Settings
- ▶ Print Quality Settings
- ▶ Font/Form
- ▶ Report Types
- ▶ Direct Print

**PCL Settings**

Font Number	0
Symbol Set	PC-8
Lines Per Page	60
Font Point Size	12.00 Point
Font Pitch Size	10.00
CR/LF Mapping	CR=CR LF=LF

The [Print] - [Default Settings] - [PCL Settings] window provides the following information.

Item	Description
[Font Number]	Displays the default font in the PCL language.
[Symbol Set]	Displays the symbol set used with the PCL language.
[Lines Per Page]	Indicates how many lines are in a page in PCL language.
[Font Point Size]	Displays the font size in the PCL language.
[Font Pitch Size]	Displays the font pitch in the PCL language.
[CR/LF Mapping]	Indicates CR/LF code definition in PCL language.

## PS Settings



Log out   System   Job   Print   Scan

- ▼ Default Settings
  - ▶ General Settings
  - ▶ Paper Source Settings
  - ▶ Tray Mapping Settings
  - ▶ PCL Settings
  - ▶ PS Settings
  - ▶ XPS Settings
  - ▶ Print Quality Settings
  - ▶ Font/Form
  - ▶ Report Types
  - ▶ Direct Print

### PS Settings

Wait Timeout	0 Seconds
PS Protocol	Auto
Print to PS Error	Off
Auto Trapping	Off
Black Overprint	Off

The [Print] - [Default Settings] - [PS Settings] window provides the following information.

Item	Description
[Wait Timeout]	Indicates Postscript timeout. [0] means that no time-out control is effective.
[PS Protocol]	Displays the settings for the PS protocol.
[Print to PS Error]	Displays whether or not error printing is performed.
[Auto Trapping]	Select this option to superimpose neighboring colors to print so as to prevent white space being generated around a picture.
[Black Overprint]	You can specify to cause the overlapping on the characters alone or on characters and figures.

# XPS Settings



Log out

System Job **Print** Scan

- ▼ Default Settings
  - ▶ General Settings
  - ▶ Paper Source Settings
  - ▶ Tray Mapping Settings
  - ▶ PCL Settings
  - ▶ PS Settings
  - ▶ XPS Settings**
  - ▶ Print Quality Settings
  - ▶ Font/Form
  - ▶ Report Types
  - ▶ Direct Print

XPS Settings	
Digital Signature	Disable
Print to XPS Error	On

The [Print] - [Default Settings] - [XPS Settings] window provides the following information.



*This page appears only if an optional Hard Disk Kit HD-P03 or a CompactFlash card is installed.*

Item	Description
[Digital Signature]	Shows whether XPS digital signatures are enabled or disabled.
[Print to XPS Error]	Shows whether or not error information is printed when an error has occurred during XPS printing.

# Print Quality Settings



Log out

System

Job

Print

Scan

## ▼ Default Settings

▶ General Settings

▶ Paper Source Settings

▶ Tray Mapping Settings

▶ PCL Settings

▶ PS Settings

▶ XPS Settings

▶ Print Quality Settings

▶ Font/Form

▶ Report Types

▶ Direct Print

## Print Quality Settings

Color Mode	Color
Color Separation	Off
Brightness	0

### Halftone

Image Printing	Detail
Text Printing	Line Art
Graphics Printing	Detail

### Edge Enhancement

Image Printing	Off
Text Printing	On
Graphics Printing	On
Edge Strength	Middle
Economy Print Mode	Off

## PCL Settings

Contrast	0
----------	---

### Image Printing

Source	sRGB
Intent	Photographic
Gray Treatment	Black and Gray

### Text Printing

Source	sRGB
Intent	Vivid
Gray Treatment	Black and Gray

### Graphics Printing

Source	sRGB
Intent	Vivid
Gray Treatment	Black and Gray

The [Print] - [Default Settings] - [Print Quality Settings] window provides the following information.

Item		Description
[Print Quality Settings]	[Color Mode]	If [Color] is indicated, the pages are printed in full color.  If [Monochrome] is indicated, the pages are printed in black and white.
	[Color Separation]	If [On] is indicated, color separation is performed.  If [Off] is indicated, color separation is not performed.
	[Brightness]	Indicates the brightness of the printed image.
	[Halftone (Image/Text/Graphics Printing)]	Indicates how halftones are reproduced.  If [Line Art] is indicated, halftones are reproduced with high precision.  If [Detail] is indicated, halftones are reproduced with detail.  If [Smooth] is indicated, halftones are reproduced with smoothness.
	[Edge Enhancement (Image/Text/Graphics Printing)]	Shows the setting for whether or not edges are emphasized in images, text and graphics.
	[Edge Strength]	Shows the setting for the amount that edges are emphasized.
	[Economy Print Mode]	Shows the setting for whether or not [Economy Print Mode] is enabled. When [Economy Print Mode] is enabled, the amount of toner used is reduced when printing many drawings.

Item		Description
[PCL Set- tings]	[Contrast]	Indicates the contrast of the image.
	[Image/Text/ Graphics Printing (Source)]	Identifies the color space for RGB data.
	[Image/Text/ Graphics Printing (Intent)]	Indicates the color intent to be used on conversion RGB to CMYK by printer.
	[Image/Text/ Graphics Printing (Gray Treatment)]	Indicates the method to reproduce RGB black and gray.
[PS Set- tings]	[Image/Text/ Graphics Printing (RGB Source)]	Identifies the color space for RGB data.
	[Image/Text/ Graphics Printing (RGB Intent)]	Indicates the color intent to be used on conversion RGB to CMYK by printer.
	[Image/Text/ Graphics Printing (RGB Gray Treatment)]	Indicates the method to reproduce RGB black and gray.
	[Image/Text/ Graphics Printing (Destination Profile)]	Indicates the ICC destination profile to be used for printed output.
	[Simulation] [(Profile)]	Indicates the specific ICC simulation profile to be used for printed output.
	[Simulation] [(Intent)]	Indicates the simulation intent to be used for simulation printing.
	[Simulation] [(CMYK Gray Treatment)]	Indicates the method to reproduce CMYK black and gray for simulation printing.

<b>Item</b>		<b>Description</b>
[Calibration Settings]	[Tone Calibration]	If [On] is indicated, image adjustments are applied.  If [Off] is indicated, image adjustments are not applied.
	[Cyan/Magenta/Yellow/Black Density (Highlight)]	Indicates the density of the highlight color.
	[Cyan/Magenta/Yellow/Black Density (Middle)]	Indicates the density of the middle color.
	[Cyan/Magenta/Yellow/Black Density (Shadow)]	Indicates the density of the shadow color.

---

# Font/Form

## PCL Font



Log out

System Job Print Scan

- ▶ Default Settings
- ▼ Font/Form
  - ▶ PCL Font
  - ▶ PS Font
  - ▶ Form Overlay
  - ▶ Color Profile
  - ▶ Report Types
  - ▶ Direct Print

### PCL Font

Number	Font Name	Source
0	Courier	ROM
1	Courier Italic	ROM
2	Courier Bold	ROM
3	Courier Bold Italic	ROM
4	Naskh	ROM
5	Naskh Bold	ROM
6	Albertus Medium	ROM
7	Albertus Extra Bold	ROM
8	Antique Olive	ROM
9	Antique Olive Italic	ROM
10	Antique Olive Bold	ROM
11	Arial	ROM
12	Arial Italic	ROM
13	Arial Bold	ROM
14	Arial Bold Italic	ROM
15	Clarendon Condensed Bold	ROM

The [Print] - [Font/Form] - [PCL Font] page allows you to check the list of PCL fonts that the printer manages.

Item	Description
[Number]	Displays the control number of the font.
[Font Name]	Displays the name of the fonts.
[Source]	Displays the storage source of the font.

# PS Font



Log out

System Job Print Scan

- ▶ Default Settings
- ▼ Font/Form
  - ▶ PCL Font
  - ▶ PS Font
  - ▶ Form Overlay
  - ▶ Color Profile
  - ▶ Report Types
  - ▶ Direct Print

### PostScript Font

Number	Font Name	Source
1	Optima	ROM
2	Optima-Italic	ROM
3	OCR-B	ROM
4	Univers-Bold	ROM
5	CourierCE-BoldOblique	ROM
6	StempelGaramond-BoldItalic	ROM
7	ZapfChanceryCE-MediumItalic	ROM
8	NewCenturySchlbk-Italic	ROM
9	TimesCE-Bold	ROM
10	StempelGaramondCE-Italic	ROM
11	Clarendon	ROM
12	Univers-ExtendedObl	ROM
13	JoannaMTCE-Italic	ROM
14	HelveticaCE-CondBold	ROM
15	GillSansCE-BoldCondensed	ROM

The [Print] - [Font/Form] - [PS Font] page allows you to check the list of Post-Script fonts that the printer manages.

Item	Description
[Number]	Displays the control number of the font.
[Font Name]	Displays the name of the fonts.
[Source]	Displays the storage source of the font.

## Form Overlay



Log out   System   Job   Print   Scan

- ▶ Default Settings
- ▼ Font/Form
  - ▶ PCL Font
  - ▶ PS Font
  - ▶ Form Overlay
  - ▶ Color Profile
  - ▶ Report Types
  - ▶ Direct Print

### Form Overlay

Number	File Name	Source
--------	-----------	--------

The [Print] - [Font/Form] - [Form Overlay] page allows you to check the list of form overlays that the printer manages.

Item	Description
[Number]	Displays the control number of the overlay.
[File Name]	Displays the name of the overlays.
[Source]	Displays the storage source of the form overlay.

## Color Profile



Log out

System
Job
Print
Scan

---

- ▶ Default Settings
- ▼ Font/Form
- ▶ PCL Font
- ▶ PS Font
- ▶ Form Overlay
- ▶ Color Profile
- ▶ Report Types
- ▶ Direct Print


### Color Profile

Number	File Name	Profile Name	Class	Color Space	Source
1	sRGB	sRGB	Display Device	RGB	ROM
2	AppleRGB	AppleRGB	Display Device	RGB	ROM
3	AdobeRGB1998	AdobeRGB1998	Display Device	RGB	ROM
4	ColorMatchRGB	ColorMatchRGB	Display Device	RGB	ROM
5	BlueAdjustRGB	BlueAdjustRGB	Input Device	RGB	ROM
6	SWOP	SWOP	Output Device	CMYK	ROM
7	Euroscale	Eurocolor	Output Device	CMYK	ROM
8	CommercialPress	CommercialPress	Output Device	CMYK	ROM
9	JapanColor	JapanColor	Output Device	CMYK	ROM
10	TOYO	TOYO	Output Device	CMYK	ROM
11	DIC	DIC	Output Device	CMYK	ROM

The [Print] - [Font/Form] - [Color Profile] page allows you to check the list of color profiles that the printer manages.

Item	Description
[Number]	Displays the control number of the color profile.
[File Name]	Displays the file name of the color profile.
[Profile Name]	Displays the name of the color profile.
[Class]	Displays the type of color profile.
[Color Space]	Displays the color space for the color profile.
[Source]	Displays the storage source of the color profile.

# Report Types

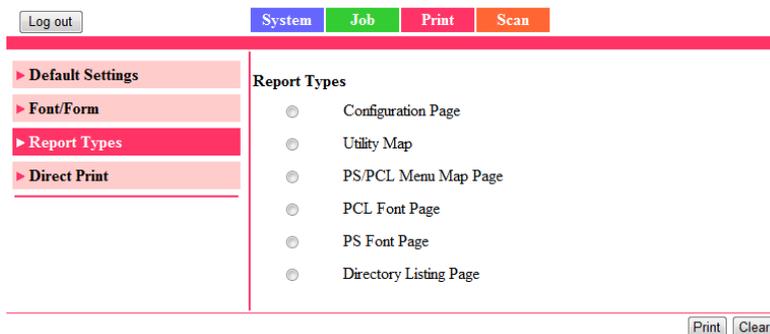

The [Print] - [Report Types] window provides the following information.

Item	Description
[Configuration Page]	Prints the printer configuration page.
[Utility Map]	Prints the printer utility map page.
[PS/PCL Menu Map Page]	Prints the printer PS/PCL menu map page.
[PCL Font Page]	Prints the PCL font lists.
[PS Font Page]	Prints the PostScript font lists.
[Directory Listing Page]	Prints the directory list.  <i>This menu item appears only if an optional Hard Disk Kit HD-P03 or a CompactFlash card is installed.</i>
[Print] button	Sends the page to the printer.
[Clear] button	Cancel the selected settings.

# Direct Print



Log out

System Job Print Scan

► Default Settings

► Font/Form

► Report Types

► Direct Print

Direct Print

File Name  Browse...

Send File to Printer

The [Print] - [Direct Print] page allows you to print a file directly from the printer without starting up the application.



*This page appears only if an optional Hard Disk Kit HD-P03 or a CompactFlash card is installed*



*This page appears when both [Public Access] (in the [Network] - [Authentication] - [User Authentication] page) and [Print] (in the [System] - [Authentication] - [Default Permission Settings]) are set to [Allow].*



*The following file formats can be printed using direct printing: PDF, TIFF, JPEG and XPS.*

Item	Description
[File Name]	Specify the location of the file to be printed. Click [Browse], and then select the file.
[Browse] button	Displays a dialog box for browsing to the file to be printed.
[Send] button	Sends the specified file to the printer.