System Page

On this page you find printer status and current configuration settings, printer identification.





All of the information displayed on the System page is read only.

Device Information

Summary (previous page)

The [System] - [Device Information] - [Summary] window provides the following information.

Item	Description
[Copier RAM]	Displays the amount of copier memory installed in the machine.
[Printer RAM]	Displays the amount of printer memory installed in the machine.
[HDD]	If an optional Hard Disk Kit HD-P03 is installed in the printer, displays the size of the Hard Disk Kit HD-P03.
	If no optional Hard Disk Kit HD-P03 is installed in the printer, displays [Not Installed].
[Memory Card]	If an optional CompactFlash card is installed in the printer, displays the size of the CompactFlash card.
	If no optional CompactFlash card is installed in the printer, displays [Not Installed].
[Duplex]	Identifies whether the duplex is [Installed] or [Not Installed].
[Paper Source]	Identifies the paper feed units installed on the printer.
[Output Tray]	Identifies the output tray installed on the machine.
[Network]	Lists the installed printer interface (Ethernet 10Base-T/100Base-TX/1000Base-T).

Paper Source



Log out	System Job	Print	Scan		
Device Information	Paper Source				
> Summary > Paper Source	Paper Source	Paper Size	Paper Type	Paper	
► Output Tray	Tray1	A4	Plain Paper	Empty	Detail
► Storage			DI : D	D 1	Detail
Interface Information	Iray2	A4	Plain Paper	Ready	
Consumables					
► Counter					
► Online Assistance					

The [System] - [Device Information] - [Paper Source] window provides the following information.

Item	Description
[Paper Source]	Identifies the paper feed units Tray 1/2/3 installed on the machine.
[Paper Size]	Indicates the size of paper loaded in a specific tray.
[Paper Type]	Indicates the type of paper loaded in a specific tray.
[Paper]	Indicates the paper status ([Ready] or [Empty]) for each tray.
[Detail] button	Displays detailed information about the paper trays.

Paper Source (Detail)



Log out	System Job Print Scan
V Device Information	Detail
Summary	Den en Sennes
► Paper Source	
► Output Tray	Paper Size A4
► Storage	Paper Type Plain Paper
Interface Information	Capacity 100
► Consumables	Paper Empty
► Counter	Back
Online Assistance	

The [System] - [Device Information] - [Paper Source] - [Detail] window provides the following information.

Item	Description
[Paper Source]	Displays the names of the paper trays.
[Paper Size]	Displays the paper sizes.
[Paper Type]	Displays the paper types.
[Capacity]	Displays the maximum capacity for each paper tray.
[Paper]	Displays the amount of paper remaining.
[Back] button	Returns to the previous screen.

Output Tray

	Ready				
Log out	System	Job	Print	Scan	
V Device Information	Output Tra	y			
► Summary		-	-		n
► Paper Source		1	ray		Paper
► Output Tray		Ma	in Tray		Ready
► Storage					
Interface Information					
► Consumables					
► Counter					
Online Assistance					

The [System] - [Device Information] - [Output Tray] window provides the following information.

Item	Description
[Tray]	Displays the name of the output tray.
[Paper]	Displays the status ([Ready], [Full]) of the output tray.

Storage

	Ready	,				
Log out	System	Job	Print	Scan		
V Device Information	Hard Disk	:				
► Summary		m		·· ·		
► Paper Source		Total		Used		Kemaming
► Output Tray	18423MB 10MB 18413M			18413MB		
► Storage	Memory C	Card				
▶ Interface Information		T-4-1		Und		Demeining
► Consumables		Total		Usea		Remaining
► Counter		- N	MB	-	MB	- MB
► Online Assistance						

The [System] - [Device Information] - [Storage] window provides the following information.

Item	Description
[Total]	Displays the total amount of space on the hard disk and CompactFlash card.
	If no optional storages are installed, [-] are dis- played.
[Used]	Displays the amount of space on the hard disk and CompactFlash card that are used.
	If no optional storages are installed, [-] are dis- played.
[Remaining]	Displays the amount of space remaining on the hard disk and CompactFlash card.
	If no optional storages are installed, [-] are dis- played.

Interface Information



Log out	System Job Print	Scan		
Device Information				
Summary	TCP/IP	Fnable		
Papar Source	IPv6	Enable		
Outrast Tures	Bonjour	Enable		
• Output Tray	FTP TX	Enable		
► Storage	FTP Server	Enable		
Interface Information	LDAP	Enable		
Consumables	SMB	Enable		
► Counter	Dynamic DNS	Disable		
Online Assistance	IPP	Disable		
	LPD	Enable		
	RAW Port	Enable		
	SLP	Enable		
	SMTP	Enable		
	SNMP	Enable		
	WSD Print	Enable		
	LLTD	Enable		
	LLMNR	Enable		
	AppleTalk	Enable		
	NetWare	Disable		
	IEEE802.1x	Disable		
	Network Information			
	Туре	Ethemet 10Base-T/100Base- TX/1000Base-T		
	Ethernet Speed	Auto		
	IP Address	192.168.1.2		
	IPv6 Link Local Address	fe80::220:6bfffedd:47ba		
	IPv6 Global Address	::/0		
	MAC Address	00:20:6B:DD:47:BA		
	Host Name	BHC25-DD47BA		

The [System] - [Device Information] - [Interface Information] window provides the following information.

Item		Description		
[Protocol	[TCP/IP]	If [Enable] is displayed, TCP/IP is enabled.		
tion		If [Disable] is selected, TCP/IP is disabled.		
	[IPv6]	If [Enable] is displayed, IPv6 is enabled.		
		If [Disable] is selected, IPv6 is disabled.		
	[Bonjour]	If [Enable] is displayed, Bonjour is enabled.		
		If [Disable] is selected, Bonjour is disabled.		
	[FTP TX]	If [Enable] is displayed, FTP transmission is enabled.		
		If [Disable] is selected, FTP transmission is disabled.		
	[FTP Server]	If [Enable] is displayed, FTP server function is enabled.		
[LDAP]		If [Disable] is selected, FTP server function is disabled.		
	[LDAP]	If [Enable] is displayed, LDAP server is enabled.		
		If [Disable] is selected, LDAP server is dis- abled.		
	[SMB]	If [Enable] is displayed, SMB is enabled.		
		If [Disable] is selected, SMB is disabled.		
	[Dynamic DNS]	If [Enable] is displayed, Dynamic DNS is enabled.		
		If [Disable] is selected, Dynamic DNS is dis- abled.		
	[IPP]	If [Enable] is displayed, IPP is enabled.		
		If [Disable] is selected, IPP is disabled.		
	[LPD]	If [Enable] is displayed, LPD is enabled.		
		If [Disable] is selected, LPD is disabled.		
	[RAW Port]	If [Enable] is displayed, RAW Port is enabled.		
		If [Disable] is selected, RAW Port is dis- abled.		

Item	Description
[SLP]	If [Enable] is displayed, SLP is enabled.
	If [Disable] is selected, SLP is disabled.
[SMTP]	If [Enable] is displayed, SMTP is enabled.
	If [Disable] is selected, SMTP is disabled.
[SNMP]	If [Enable] is displayed, SNMP is enabled.
	If [Disable] is selected, SNMP is disabled.
[WSD Print	If [Enable] is displayed, WSD Print is enabled.
	If [Disable] is selected, WSD Print is dis- abled.
[LLTD]	If [Enable] is displayed, LLTD is enabled.
	If [Disable] is selected, LLTD is disabled.
[LLMNR]	If [Enable] is displayed, LLMNR is enabled.
	If [Disable] is selected, LLMNR is disabled.
[AppleTalk]	If [Enable] is displayed, AppleTalk is enabled.
	If [Disable] is selected, AppleTalk is dis- abled.
[NetWare]	If [Enable] is displayed, NetWare is enabled.
	If [Disable] is selected, NetWare is disabled.
[IEEE802.1	x] If [Enable] is displayed, IEEE802.1x is enabled.
	If [Disable] is selected, IEEE802.1x is dis- abled.

Item		Description
[Network Informa- tion]	[Type]	Identifies the type of network interface installed on the printer (Ethernet 10Base-T/ 100Base-TX/1000Base-T).
	[Ethernet Speed]	Indicates the transmission speed for the network and the transmission method for bidirectional transmission.
	[IP Address]	Identifies the IP (Internet Protocol) address of the Ethernet interface.
	[IPv6 Link Local Address]	Identifies the IPv6 link local address of the Ethernet interface.
	[IPv6 Global Address]	Identifies the IPv6 global address of the Eth- ernet interface.
	[MAC Address]	Identifies the MAC (Media Access Control) address of the Ethernet interface.
	[Host Name]	Identifies the host name for the printer.
	[Print Server Name (NetWare)]	Identifies the Print Server Name for the Net- Ware.
	[Printer Name (AppleTalk)]	Identifies the printer name on AppleTalk.
	[Current Zone Name (AppleTalk)]	Identifies the Current Zone Name for the AppleTalk.
	[Bonjour Name]	Displays the Bonjour name for the printer.
	[WSD Printer Name]	Displays the WSD printer name for the printer.

Consumables

Ready



The [System] - [Device Information] - [Consumables] window provides the following information.

Item	Description	
[Consumables]	Identifies the type of consumable that is being monitored.	
[Status]	Indicates the remaining life of the consumables.	
	Toner Cartridge, Imaging Unit, Transfer Belt, Transfer Roller, Fuser Unit: Percentage	
	• Waste Toner Bottle: [Ready], [Near Full], or [Full]	
[TYPE]	Identifies the type of Toner Cartridge.	
	• [High], [Starter]	

Counter



The [System] - [Counter] window provides the following information.

Item	Description
[Total Print]	Indicates the total number of all printed pages.
	• [Total Faces Counter], [Color Copy], [Color Print], [Mono Copy], [Mono Print], [Fax Print], [Total Duplex Counter], [Duplex Color Copy], [Duplex Color Print], [Duplex Mono Copy], [Duplex Mono Print], [Duplex Fax Print], [Total Face Large size], [Color Copy Large Size], [Color Print Large size], [Mono Copy Large Size], [Mono Print Large Size], [Fax Print Large Size]
[Total Scan]	Indicates the total number of pages that have been scanned.
	 [Total Scan/Fax], [Total Scan/Fax Large Size], [Total Scan], [Total Scan Large Size], [Color Scan], [Color Scan Large Size], [Mono Scan], [Mono Scan Large Size], [Total Fax Scan], [Total Fax Scan Large Size], [Color Copy Scan], [Color Copy Scan Large Size], [Mono Copy Scan], [Mono Copy Scan Large Size]
[Normalized Total Faces	The number of printed pages is displayed calculated in terms of A4-size paper.
Counter]	 [Color Faces Printed], [Monochrome Faces Printed], [Total]
[Fax Counter]	Indicates the total number of fax transmission and reception pages.
	• [Tx (Transmission) Counter], [Rx (Reception) Counter]
[Scan	Indicates the total number of scanned pages.
Counter	• [IR], [ADF]
[Tray Counter]	Indicates the total number of pages for each tray setting.
	 [Tray 1], [Tray 2], [Tray 3 (when installed)]
[Paper Size Counter]	Indicates the total number of pages for each paper size.
	• [A4], [B5 (JIS)], [A5], [Legal], [Letter], [Others]
[Paper Type	Indicates the total number of pages for each paper type.
Counterj	 [Plain Paper], [Recycled], [Thick 1], [Thick 2], [Glossy 1], [Glossy 2], [Envelope], [Letterhead], [Postcard], [Label], [Single Side Only], [Special Paper]

Item	Description
[Application Counter]	 Indicates the total number of pages for each application. [Copy Print], [Fax Reception print], [Report output print], [PC print], [Scan to Fax], [Scan To E-mail], [Scan To FTP], [Scan To SMB], [Scan to USB], [TWAIN], [USB To Printing]

Online Assistance



Log out	System	Job	Print	Scan	
Device Information Counter Online Assistance	Online Ass Contact 1 Contact 1 Product 1 Corporat Supplies Contact 1 Contact 2	istance Name information Help URL e URL and Access Phone Num Address Utility Link	ories ber	KONICA MINOLTA Cust http://pagescope.com http://konicaminolta.com	omer Support
	1				

The [System] - [Online Assistance] window provides the following information.

Item	Description
[Contact Name]	Displays the organization responsible for providing assis- tance with the machine.
[Contact Information]	Displays the web site address for assistance.
[Product Help URL]	Displays the help web site address for machine assistance.
[Corporate URL]	Displays the KONICA MINOLTA corporate web site address.
[Supplies and Accessories]	Displays the web site address where you can purchase machine supplies and accessories.
[Contact Phone Num- ber]	Displays the telephone number of the printer administrator.
[Contact Address]	Displays the e-mail address for support.
[Contact Utility Link]	Displays the link to the Printer Management Utilities.

User Authentication

r٦	~

This page appears only when logged on to Registered User Mode.

User Password Change

Log out	System Job	Print	Scan	
► Device Information	User Password Chang	e		
▶ Counter	User Name	User Name		
Online Assistance	Current Password			
∨User Authentication	New Password			
► User Password Change	Retype New Password			
Registration Information				

The password for the user who is logged on can be changed from the [System] - [User Authentication] - [User Password Change] page.

Item	Description	
[User Name]	Shows the name of the user who is logged on.	
[Current Password]	Type in the current password for the user who is logged on.	
	Range: Up to 64 bytes	
	Default: Blank	
[New Password]	Type in the new password.	
	Range: Up to 64 bytes	
	Default: Blank	
[Retype New Pass-	Type in the new password again for confirmation.	
word	Range: Up to 64 bytes	
	Default: Blank	

Item	Description
[Apply] button	Applies the new password.
	If the password typed in three text boxes doesn't match, the following message displays when you choose the [Apply] button: "Password was changed unsuccessfully. Please retry." Retype the passwords in both text boxes.
[Clear] button	Resets all configuration settings to previous values.

Registration Information

	Ready			
Log out	System	Job	Print	Scan
	1			
Device Information	Registratio	n User Inf	ormation	
▶ Counter	No.			1
Online Assistance	User N	ame		1
∨ User Authentication	Function P	ermission]	Information	
User Password Change	Print			Allow
Desistantian Information	Output Permission Information			
Kegistration Information	Color			Allow
	Black			Allow

The registration information for the user who is logged on can be checked from the [System] - [User Authentication] - [Registration Information] page.

Item	Description
[Registration User Information]	Shows the registration number (No.) and user name for the user who is logged on.
[Function Permission Information]	Shows whether printing is permitted by the user who is logged on.
[Output Permission Information]	Shows whether color printing and whether black-and-white printing is permitted by the user who is logged on.