

Press **MENU**, ②③ and **OK**. Enter a code (maximum of 20 characters) and press **OK** to confirm. The document can now be polled by a person in possession of this code. You can still make telephone calls while this function is activated.

- 3 The operation is interrupted as soon as you remove the document.

Polling codes work in accordance with the ITU international standard. However, there are manufacturers who use other processes and whose machines are therefore not compatible.

If you want to send faxes to fax databases or if you want to poll from these, some databases have a sub-address which you can add to the telephone number. This will save you money in telephone charges. First enter the telephone number of the database and then press **R**. Then enter the required sub-address. If you are not sure whether your fax polling service supports sub-addresses, please contact your polling service operator.

## Send later

If you wish to make use of cheaper telephone rates, or if your fax correspondent is only available at particular times, you can program automatic transmission of a fax at a later time (within 24 hours).

- 1 Press **MENU**, ②④ and **OK**. Enter the time when you wish the document to be sent.
- 2 Press **OK** and insert the document.




- 3 Dial the desired telephone number and then press **START**.
- 4 The fax machine is now ready to send the inserted document. You can still make telephone calls while this function is activated.

- 5 If you remove the inserted document the stand-by mode is cancelled.

## Copy

You can use your fax machine to make copies of an original. Resolution **F** is set by default. In addition, you can also select resolution **P** (see chapter **Fax & Copy** / Image quality).

- 1 Place your documents face to the front in the document feeder. You can load up to 10 pages at once.

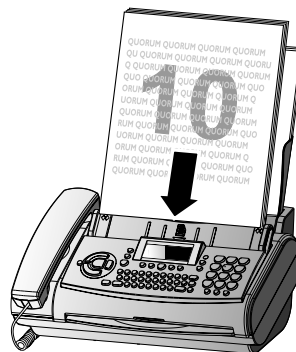

- 2 Select the desired resolution with **FINE/PHOTO**.
  - a To make only one copy of the original, briefly press **COPY**. The copying process starts immediately.
  - b In order to make more than one copy press **COPY** (for at least two seconds).

The display will show the actual number of copies. If you want to change this figure enter the desired number with the number keys (max. 20). Press **COPY**.

- 3 Choose whether to reduce or enlarge the document in size when copying.

Your machine provides the following options:

ZOOM ENLARGE: 200

ZOOM ENLARGE: 150

ZOOM NORMAL: 1:1

ZOOM REDUCE: 75

ZOOM REDUCE: 50

- 4 Select the desired option with **◀/▶** and confirm with **OK**.

# Fax & Copy

The machine stores the first page of the document into memory and starts copying. Automatic sorting is therefore not an option!

To interrupt the copying process press **STOP**.

In case of a paper jam, if the inkfilm is empty or the memory is full, the copying process will be interrupted automatically.

In the event of a document jam see **Hints and Tips** / Document jam.

# SMS

## (only for devices with SMS functionality)

(not available in all countries)

You can send and receive SMS (Short Message Service) messages with your fax machine. Your fax machine is already set up to make use of SMS services – depending on the country and network.

- Before you can send and receive SMS messages the CLIP feature (Calling Line Identification Presentation) must be enabled for your telephone line. ^
- Make sure that this feature is activated on your line.
- To send an SMS the call number of an SMS provider must be entered in your fax (SMS center).

Check the following with your service provider:

- What costs are billed for sending and possibly receiving an SMS message,
- Which mobile networks can you send SMS messages to and which mobile networks can you receive SMS messages from,
- Which functions are offered by your SMS service.

## SMS settings

Your fax machine is already set up to make use of SMS services. If you do have any problems, however, you should contact your telephone network provider.

You can change the predefined SMS provider and enter a second provider.

- 1 Press **MENU**, **①⑦** and **OK**.
- 2 The current provider will be displayed. Use **◀/▶** to select either **SMS■CENTER 1** or **2**.
- 3 Confirm with **OK**.
- 4 Enter the **NO. FOR TRANSM.** Confirm with **OK**.
- 5 Enter the **NO. FOR RECEPT.** Confirm with **OK**.

The **NO. FOR TRANSM.** and the **NO. FOR RECEPT.** are needed in order to use SMS services. In some countries these numbers may be identical.


## Disable SMS printing

- 1 Press **MENU**, **①⑦** and then **OK** four times.
- 2 Use **◀/▶** to choose whether to have incoming messages automatically printed or not: **PRINT SMS: YES, NO**
- 3 Press **OK** to complete your action.

⚠ If your fax machine is connected to a PABX system you may not be able to use SMS services. Contact the operator or manufacturer of the PABX system.

## Reading SMS messages

When you receive an SMS message you will hear a beep. The message will be stored and automatically printed out. You can disable automatic printout (see Disable SMS printing).

In this case, the **SMS** key will flash when a new SMS message is received and the display will show  and the number of new SMS messages. You can read these SMS messages on the display:

- 1 Press **SMS**.
- 2 Press **◀/▶** to select **READ SMS**.
- 3 Press **OK**.
- 4 The number, date and time of the last message will be displayed. Unread messages are marked with an asterisk. Press **◀/▶** to select the SMS you want and press **OK**.
- 5 The SMS message will be displayed. Use **◀/▶** to move within the message. If you hold down **◀/▶** the cursor will move to the start or end of the SMS message.

With **OK** and **◀/▶** you can select any of a wide range of options (see Other SMS functions).

Press **COPY** and **OK** to print the message.

- 6 Select **STOP** to return to the list of received SMS messages.

You can also read SMS messages by pressing **MENU**, **④②** and **OK**.

# SMS

## Sending SMS messages

- 1 Press **SMS**.
- 2 Press **◀/▶** to select **SEND SMS**.
- 3 Press **OK**.
- 4 The display shows **TEXT:**. Enter your text message on the alphabetic keypad (maximum of 160 characters). If there are numbers in the message you should use the numerical keypad. You can select any of the last five SMS messages you have written and use it as a template. Press **→→** until the message you want appears.

⚠ Press the **ⓘ** button to check how many characters you can still enter.

- 5 Press **COPY** to print the message and **OK**.
- 6 Enter the recipient's number. Confirm with **OK**.

You can use the phonebook **☐ A-Z**, the short dial directory **☐ 0-9** or the redial function **→→** to enter the number.

- 7 You can enter up to five recipients. When you have entered each telephone number press **OK**. Finally, press **SMS**.
- 8 Your SMS message will be sent.

Use **◀/▶** to move within the message or the number. If you hold down **◀/▶** the cursor will move to the start or end of the message or number.

To delete the character to the left of the cursor press **C**. To delete all the text hold down **C** (two seconds).

You can also send SMS messages by pressing **MENU**, **④①** and **OK**.

## Printing SMS messages

- 1 Press **SMS**.
- 2 Press **◀/▶** to select **PRINT SMS**.
- 3 Press **OK**.
- 4 Use **◀/▶** to select which SMS messages you want to print:  
**PRINT: ALL**  
**PRINT: INBOX**  
**PRINT: NEW**

- 5 Press **OK**. The messages will be printed out.

You can also print SMS messages by pressing **MENU**, **④③** and **OK**.

## Deleting SMS messages

To free up the memory so it can receive new messages you should delete any messages you have already read.

- 1 Press **SMS**.
- 2 Press **◀/▶** to select **READ SMS**.
- 3 Press **OK**.
- 4 The stored messages will be displayed. Use **◀/▶** to select the SMS message you want to delete.
- 5 Press **C**.
- 6 Use **◀/▶** to select one of the following:  
**DELETE: YES**  
**DELETE: NO**  
**DELETE: ALL**
- 7 Confirm with **OK**.

⚠ If the SMS memory is full (maximum of 30 messages) no new messages can be received. You should delete SMS messages you have already read.

## Other SMS functions

- 1 If you press **OK** while you are reading an SMS message you can use **◀/▶** to select one of the following options:

<b>PRINT SMS</b>	print out the SMS message
<b>BACK</b>	return to the list
<b>FORWARD SMS</b>	send the SMS message to someone else
<b>REPLY SMS</b>	answer the SMS message
<b>DELETE</b>	delete the SMS message
<b>READ NEXT</b>	display the next SMS message
<b>READ PREVIOUS</b>	display the previous SMS message

- 2 Confirm with **OK**.

## Disable SMS reception

If you are running an SMS-capable cordless phone on the same line it is impossible to say which device will actually receive the SMS message. However, you can only receive SMS messages on one device at any one time. Try to disable SMS reception on the cordless phone. If you cannot do this, disable SMS reception on the fax machine.

- 1 Press **MENU**, **4** **5** and **OK**.
- 2 Enter **5** **1** **2** **0** **5** and press **OK**.
- 3 Use **◀/▶** to choose whether to enable or disable SMS reception.  
**SURE: NO**  
**SURE: YES**
- 4 Press **OK** to complete your action.

You can use the same procedure to enable SMS reception again.

You can still send SMS messages even if SMS reception is disabled.

## Answering machine


(only for devices with built-in answering machine)

The recording capacity is 30 minutes.

Your answering machine is factory-programmed with a recorded outgoing message. If you want to record your own outgoing message, proceed as described under "Recording a message".

Make sure that your fax machine stands on a hard, flat surface, because otherwise the microphone may be covered.

### Switching on and off

Activate or deactivate your answering machine with **ON/OFF**. Activate mode is indicated with the symbol  on the display.

### Recording a message

- 1 Hold down **REC** for two seconds. Press **REC** again, until you hear a confirmation tone. Lift the handset and start to record your message.
- 2 A black bar indicates you how much memory is available for the outgoing message (max. 20 seconds).
- 3 Stop recording by pressing **REC** or **STOP**.
- 4 The new answering message is automatically replayed. By pressing **◀/▶** you can change the volume of the message.
- 5 To hear the message again, press **REC** for a while (two seconds) and then **PLAY**.

### Duration of recording

- 1 Select **MENU**, **⑤①** and **OK**.
- 2 Press **◀/▶** to choose between 30, 60, 120 seconds or the **AUTO** mode (unlimited recording time). Please note that **AUTO** mode is not available in all countries.
- 3 Confirm with **OK**.

### Listening to messages

- 1 If **PLAY** flashes, messages have been recorded for you. Press **PLAY** to listen to the first message. The date and time the message was received and the number of the caller will be displayed.
- 2 The next message will be replayed if you press **PLAY** while listening to any message.
- 3 You can switch between messages by entering the number of the message you want while the messages are being played. For example, enter **①** for the first message.
- 4 After listening to your messages **PLAY** will stay on until all messages have been erased.

### Play back volume

- 1 Press **◀/▶** while playing back messages. The current volume setting will be displayed.
- 2 Press **◀/▶** to obtain the desired volume.

### Deleting messages

#### Single messages


- 1 If you want to delete the message which is currently being played, press **C**.
- 2 You will be asked on the display if you really want to delete this message. Press **C** again.

#### All messages

- 1 Press **C** after having listened to all messages.
- 2 If you actually want to delete all messages, press **C** again. To interrupt the deleting process press **STOP**.

## Forwarding messages

Your fax machine can automatically forward all incoming messages to another telephone number. Enter the telephone number to which you wish recorded calls to be forwarded. You can select the number of messages to be forwarded each time. Your fax machine will wait until the selected number of messages has been received and then calls the desired number automatically. A text announcing the call forwarding is transmitted when the connection is made. Then the party to which the calls are being forwarded needs to enter the access code (see function 52). If you do not enter the right code within 40 seconds or if you enter the wrong code three times, the fax machine will drop the call.

- 1 In case your answering machine is deactivated turn it on with **ON/OFF**. The symbol  appears on the display.
- 2 Select **MENU**, **5****5** and **OK**.
- 3 Choose with **◀/▶** **FORWARD CALL: ON** and confirm with **OK**.
- 4 Enter the telephone number your messages should be forwarded to and press **OK**.
- 5 Choose with **◀/▶** the number of messages you want to be forwarded each time.
- 6 To record a new forwarding message, press **OK**.\*
- 7 Press **REC**. Wait for the confirmation tone and start speaking. An example of an announcement might be: "Hello, there are messages for Mr. Smith; please enter the access code." Position yourself about 20 cm from the fax machine. A black bar will indicate how much memory is available.
- 8 Press **STOP** when you have finished. The forwarding message will be played back.
- 9 The fax machine is now switched to stand-by mode.

### \* if a message has already been recorded

- a Press **OK**.
- b Select with **◀/▶**. If you wish to record a new forwarding message, select **REC. MESSAGE: YES**. If you want to use the existing message, select **REC. MESSAGE: NO**. Press **OK** to confirm.

- c Follow the process described above from paragraph 7.

## Recording a conversation

You can record a telephone conversation with your fax machine.

- 1 Press **REC** during a telephone conversation.
- 2 To stop recording, replace handset or press **STOP**.
- 3 The recorded conversation can be played back and deleted like any recorded message.

You can not record a telephone conversation while hands-free operation is activated.

## VIP code

### Ringling despite answering machine

Persons you had given this code, can make the telephone ring after the answering machine has taken the call. This is useful if both ring counts in function 31 and 32 have been set to 0.

- 1 To enter the code select **MENU**, **5****3** and press **OK**. Enter a four digit code. Confirm with **OK**.
- 2 This code must not be identical with the access code (function 52).

## Memo

### External memo

You can record a message which the caller can hear without being able to leave a message in return. For this the answering machine must be switched on.

- 1 Select **MENU**, **5****4** and press **OK**. Choose the external memo mode by pressing **◀/▶**. Confirm with **OK** (if you already have recorded a memo you want to use again, just press **OK** once more).
- 2 Press **REC** and wait for the confirmation tone. Start to speak. Press **STOP** when you are finished. The message will be played back.



## Internal memo

You can record a personal message with this function. Messages can be heard on the fax machine itself or by remote control from a telephone. Briefly press **REC** twice and wait for the confirmation tone. Record the desired message. A black bar on the display indicates the remaining recording time. To end recording press **STOP**. Internal memos can be played back and deleted like any other message.

## Remote control

You can also control the answering machine functions on your fax from any telephone using tone dialling. Before you can use remote control you have to enter an access code in function 52 (this code will also be used for function 55 Forwarding).

### Preparing your fax machine for remote access

- 1 Select **MENU**, ⑤ ② and **OK**.
- 2 Enter a four digit code.
- 3 Press **OK**. The code is now stored.

### Remote access of the answering machine

- 1 If you want to listen to the messages recorded from another telephone, call your fax machine and wait for the answering machine to play the message.

- 2 Enter the four-digit code. The outgoing message will be interrupted and you will hear a confirmation tone. The new messages will be played back. If no new messages have been recorded, you will hear a second confirmation tone.
- 3 Then you can enter commands as usual or terminate the remote control by replacing the handset.

### Overview of commands

- ① The message you are just listening to will be repeated.
- ② Your messages will be played back.
- ③ Move to the next message.
- ④ Record a new outgoing message. Press ④. If you press ④ again after two confirmation tones, you will hear a long confirmation tone. Record the new outgoing message and finish with ④.
- ⑤ The current outgoing message will be replayed.
- ⑥ The current message will be deleted. If you press ⑥ after having listened to all messages, all messages will be deleted.


In both cases you will hear a confirmation tone after the first time you press the key. Press ⑥ again within five seconds to execute the deleting command.

- ⑦ Switch answering machine off.
- ⑧ The current command will be interrupted.
- ⑨ Switch answering machine on.

### FUNCTIONS

- |                            |   |
|----------------------------|---|
| ① Repeat current message   | ⑥ Delete message<br>Current message:<br>Press ⑥, deleted    |
| ② Play                     | All messages:<br>Press ⑥, deleted                           |
| ③ Skip forward             | ⑦ Answering machine off<br>Press ⑦, (answering machine off) |
| ④ Record outgoing messages | ⑧ STOP  |
| ⑤ Play outgoing message    | ⑨ Answering machine on<br>Press ⑨, (answering machine on)   |

### Remote Access

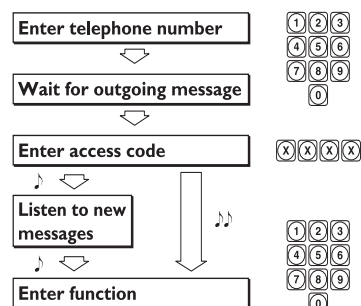




# Hints and Tips

## Delivery service


You can order inkfilms and cleaning accessories at your local dealer or directly from PHILIPS (free delivery) on Freefone 0800 358 08 07 (United Kingdom).

## Paper jam


- 1 The display shows **PAPER JAM**.
- 2 Open the operation panel by lifting in the middle. When you hear a soft click, the panel is engaged.

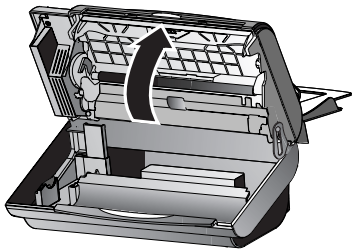


- 3 Carefully remove the paper.

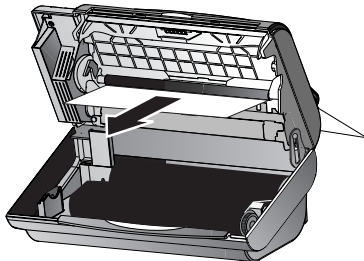

- 4 Turn small roll forward to tension the ink film. Make sure that the ink film is not creased.

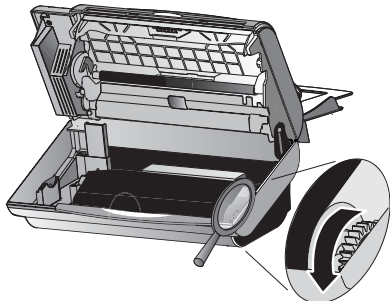


- 5 Close the panel so that it also clicks into place.

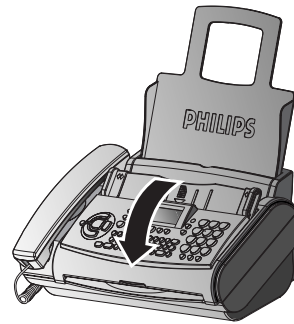


- 6 Insert paper (see **Installation** / Loading paper).

## Document jam


- 1 Open the paper feed flap and carefully pull out the paper. Close the flap again.

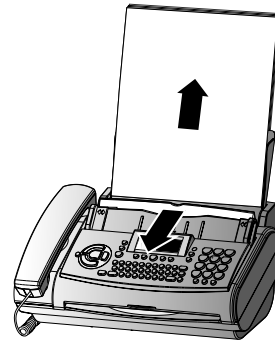


- 2 Open the operation panel by lifting in the middle. When you hear a soft click, the panel is engaged.

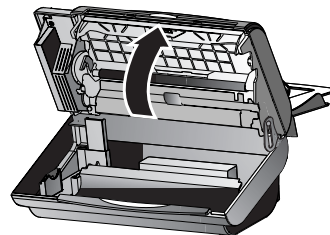


- 3 Open the scanner cover by pressing the two lugs in. The cover will open downwards.

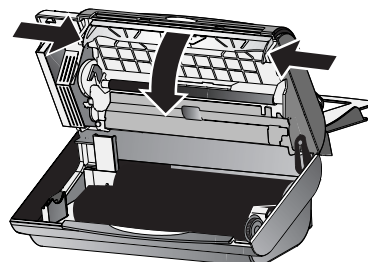


- Carefully remove the document either from the front or the back.

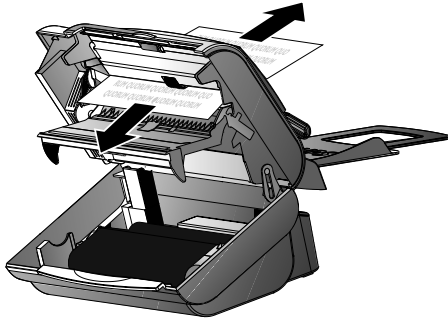

- Close the scanner cover on the left and right, making sure it clicks into place.

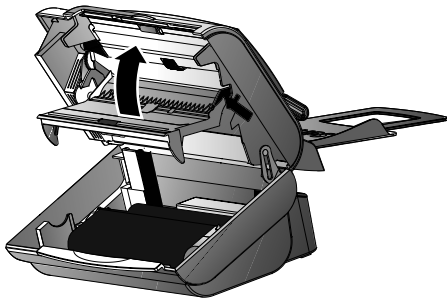

- Close the panel so that it also clicks into place.

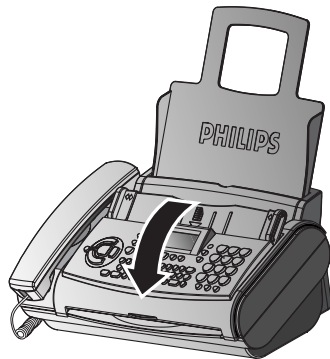

- Insert paper (see **Installation** / Loading paper).

## Easylink

Easylink is used in conjunction with additional devices connected to the same telephone line (e.g. cordless phones). However, the additional phone must be set to dual-tone multi-frequency method. If your telephone connection requires the pulse dialling method, then you would need to briefly reset your additional device to use it. For more information about this, please see the user manual for your device.

## Starting fax reception

When you answer a call on the fax machine and recognise that it is a fax (you hear a beep or no sound), press **START** and hang up. The fax will be received.

When you answer using an additional phone and it turns out to be a fax, you can start the fax reception by pressing **\*5** and then hang up. The fax machine will receive the fax.

## Interrupt ringing

When you answer on an additional phone and the fax machine continues to ring, this means that the extension phone is connected in parallel. You can interrupt the ringing of the fax machine by pressing **\*#**.

## Changing codes

Select function 34 by pressing **MENU**, **34**, and then **OK**. Enter two different codes and confirm each code with **OK**. Each code should begin with **\*** or **#**.

Please note that the three Easylink codes must be different. Otherwise on the display appears: **CODE NOT OK**

⚠ Only change the specified codes **\*5** and **\*#** if absolutely necessary!!

## Service code

Function 45 (Service code) is used to delete some or all of your changes to the factory settings. This function enables you to partially or fully reconfigure your device. It is especially helpful if you have modified settings but find that your fax machine does not respond as expected.

⚠ Only use this function when absolutely necessary!

If you are satisfied with your changes to the factory settings you should not use this function.

After deleting some or all of your custom settings please rerun Easy Install.

The following codes are at your disposal:

### Code No. 7117

This code erases all your modifications to the factory settings. The fax machine will therefore react in exactly the same way as on first installation.

## Code No. 7140

When you enter this code, all your entered settings and data will be erased, except for:

- received fax messages
- Stored SMS messages
- stored short dial numbers
- stored telephone book numbers
- your name
- your telephone number

Example for using a service code:

- 1 Select **MENU**, **4** **5** and press **OK**. Enter the service code (7117 or 7140). Press **OK**.
- 2 With **◀/▶** you can select whether you really want to delete your settings. Confirm with **OK**. Your fax machine will be reset to its original configuration.


## Care

Before opening the fax machine, make sure that you are electrically discharged by e.g. touching the metal housing of a grounded appliance, a water pipe or radiator.


Use a soft, fluff-free cloth lightly moistened with a little alcohol (96%). You can also use a special cloth for cleaning fax machines (see Delivery Service). Do not allow any moisture to penetrate inside the device.

### Clean the scanner glass


- 1 Open the paper feed flap and carefully pull out the paper. Close the flap again.

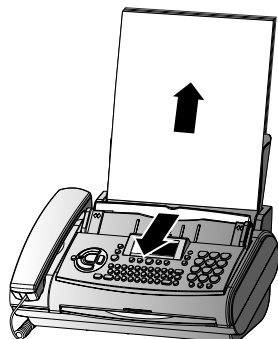


- 2 Open the operation panel by lifting in the middle. When you hear a soft click, the panel is engaged.

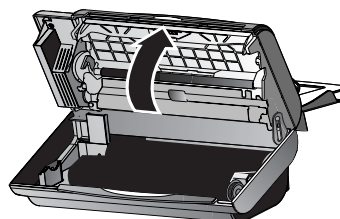


- 3 Open the scanner cover by pressing the two lugs in. The cover will open downwards.

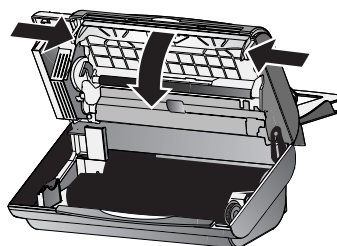


- 4 Use a soft cloth to gently wipe the scanner glass on the top (A) and the white strips on the bottom (B).

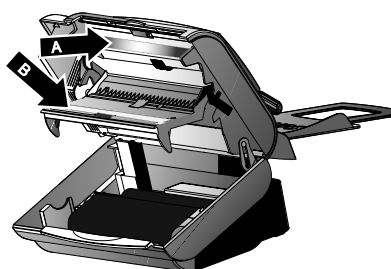

- 5 Close the scanner cover on the left and right, making sure it clicks into place.

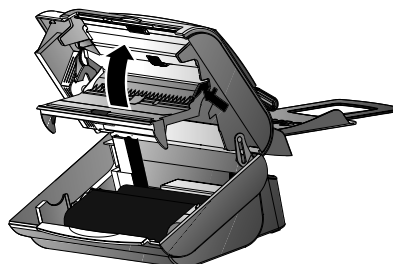

- 6 Close the panel so that it also clicks into place.

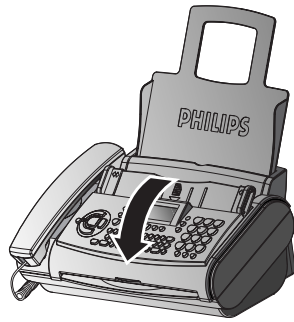





- 7 Insert paper (see **Installation** / Loading paper).

## Troubleshooting

If you cannot fix the problem based on the instructions below, you should proceed as follows:

- 1 Disconnect the mains.
- 2 Wait at least ten seconds and reconnect.
- 3 If the fault reoccurs, please contact your customer information center.

<b>Problems when faxing or printing</b>	
Faxes are of poor quality.	<p>Change the resolution setting to  or F.</p> <p>Check the document or set a higher contrast with function 47 (see chapter <b>Fax &amp; Copy</b> / Contrast).</p> <p>Test the fax machine by making a copy. If your copy is faultless the correspondent's fax machine might be defective.</p> <p>Call service if necessary.</p>
Your fax or your recipient's fax machine produces black lines when printing.	<p>Clean the scanner with a cloth (see Care and maintenance).</p> <p>Test the fax machine by making a copy. If your copy is faultless the correspondent's fax machine might be defective.</p> <p>Call service if necessary.</p>
Copy is blank..	<p>Load the document with the printed side up.</p> <p>Call service if necessary.</p>
<b>Problems with the connection</b>	
Your fax machine rings once, then there is a moment of silence and another ring signal after that.	This is entirely normal. After the first ring signal the fax machine takes over the call. When the fax machine has recognised that the incoming call is a telephone correspondence, the fax machine will continue to ring.
<b>NO CONNECTION</b> or <b>REDIAL FAILED</b>	Try later or draw your fax partner's attention to a possible installation fault.
<b>NO LOOP CURRENT</b>	Check the installation of your fax machine.
When you lift the receiver of your fax machine you do not hear the dial tone. The display shows: <b>NO DIALTONE</b>	Connect your telephone cable to the socket on the bottom of your fax machine identified with <b>LINE</b> .
<b>BUSY</b> or fax transmissions are constantly interrupted.	Try to send the fax manually: Press  / <b>DIAL</b> and dial the fax number. If the recipient is using an automatic answering device, wait until you hear a tone after the pre-recorded message. Press <b>START</b> .
You cannot receive any faxes.	Set the number of ringing signals for the answering machine or the total number of ringing signals with function 31 or 32 to lower than five.
On lifting the handset you hear a tone or silence.	You are receiving a fax. At the fax machine: Press <b>START</b> . At an additional telephone: press <b>*</b> and <b>5</b> . Replace the handset.
<b>EXTERNAL PHONE</b> The red lamp flashes  .	This is not a fault. You are now using an additional telephone.

## Appendix

### Functions

To print a list of functions, press **MENU** three times.

#### Setup

11 Set language.....	12
(select the language of the display text)	
12 Set time/date.....	11
(setting time and date)	
13 Your telephone number .....	11
(enter your telephone number)	
14 Your name .....	11
(enter your name)	
15 Line type .....	10
(setting the private branch exchange)	
17 SMS-settings *.....	23
Setting the basic SMS functions	

#### Fax

21 Transmission speed/overseas function ....	20
(setting for half-speed transmission)	
22 Polled reception.....	20
(you can call up fax messages)	
23 Polling send.....	21
(your fax message can be fetched)	
24 Send later .....	21
(faxes will be sent later)	
25 Broadcast.....	19
(same fax will be sent to more than one party)	
27 Fax journal.....	20
(log of the last ten fax documents received and sent)	
28 Transmission report.....	20
(automatic print out of transmission protocols)	
29 Size compression.....	20
(size compression of received fax messages)	

#### Fax switch

31 Day .....	13, 14
(setting the DAY operating mode ☀)	
32 Night .....	13, 14
(setting the NIGHT operating mode ☾)	

33 Timer.....	13
(setting the TIMER operating mode ⌚)	
34 Easylink.....	30
(codes for use with additional telephones)	
35 Ringer types.....	12
(selection between ten ringer types)	

#### Others

41 Send SMS * .....	24
(Sending SMS messages)	
42 View SMS * .....	23
(Reading SMS messages)	
43 Print SMS * .....	24
(Printing SMS messages)	
44 Dialling list .....	17
(print out of stored names and numbers)	
45 Service code .....	25, 31
(deleting personal settings)	
46 Group.....	17, 19
(Saving different phone numbers as a group)	
47 Set contrast.....	19
(setting of contrast for copy / fax transmission)	

#### Answering machine (only with built-in answering device)

51 Recording time.....	26
(setting for recording duration of calls)	
52 Access code.....	28
(setting the code for the remote control of the answering machine and for message forwarding)	
53 VIP code.....	27
authorised callers can override the answering machine)	
54 Memo mode.....	27
(message for the caller without the possibility to leave a message)	
55 Forwarding .....	27
(messages forwarded to another telephone number)	

\* only with SMS-functionality



## Technical data

Compatibility:	TU Group 3
Connection type:	outside line (PSTN)/ extension (PABX)
Flash times:	outside line (PSTN): 100 ms  extension (PABX): 100 ms
Document size	single sheet: 148–217 mm
width:	several sheets 148–217 mm
length:	single sheet: 100–600 mm  several sheets: 148–297 mm
thickness:	single sheet: 0,06–0,15 mm  several sheets: 0,08–0,12 mm
Printing paper:	A4 210 x 297 mm, 80 g/m <sup>2</sup>
Largest scanning width:	216 ± 1 mm
Resolution horizontal:	8 points/mm (200 dpi)
Resolution vertical:	standard 3.85 lines/mm  FINE 7.7 lines/mm
PHOTO mode	16 grey tones  64 grey tones (only with built-in answering machine)
Contrast control	automatic and manual
Copying	FINE/PHOTO resolution
Data compression	MH, MR
Modulation	V29bis, V27ter, V21, V17
Transmission speeds	14k4 (only with built-in answering device) 9600/ 7200/4800/2400bps
SMS storage capacity	30 received messages
Noise level	on standby: < 30 dBA  copying: < 53 dBA
Printing method	ink film printer
Document feed	up to 10 letters (80 g/m <sup>2</sup> )

Fax switch	DAY/NIGHT/TIMER
Dimensions	318x202x146 mm (without paper tray)
Weight	about 3 kg
Power consumption	stand by: about 2 W  telephoning: about 4 W  sending a standard letter < 20 W  receiving a standard letter < 30 W
Power supply	220–240 V / 50–60 Hz
Speech recording time	up to 30 Minuten (with built-in answering device)
Allowed operating environment	temperature: 5–40 °C, relative humidity: 15–85 % RH not condensing
Recommended operating environment in use:	temperature: 17–28 °C, relative humidity: 20–80 % RH, not condensing
Recommended operating environment in unplugged status (ready for operation with loaded ink film and paper):	temperature: 0–45 °C, relative humidity: 15–85 % RH not condensing
Interference suppression:	emission corresponding to EN 55022/VDE 0878 Part 1 Class B

## Guarantee

(UK Terms and Conditions)

At the beginning of April 2002, SAGEM SA bought the PHILIPS fax business unit. SAGEM SA is now the European Number 1 in fax and offers a complete range of fax terminals with Internet access and SMS function, multifunctional terminals and servers covering the needs of all its customers - from home-users to multinational organisations.

In order to apply the guarantee, you should contact your dealer. Proof of purchase will be required. Should malfunctioning arise, the dealer will advise you what to do.

If you bought your equipment from SAGEM Communication Austria GmbH directly, the following shall apply:



**A** SAGEM Communication Austria GmbH undertakes to remedy by repair, free of charge for labour and replacement parts, any defects in the equipment during a period of twelve (12) months from the date of original delivery of the Equipment, where those defects are a result of faulty workmanship.

During this twelve month guarantee period, the defective equipment will be repaired free of charge; the customer must however return the defective equipment at his/her own expense, to the address given by SAGEM Communication Austria GmbH After Sales Department, the phone number of which can be found on the delivery slip. Unless the customer has concluded with SAGEM Communication Austria GmbH a maintenance contract in respect of the equipment which specifically provides for repairs to be carried out at the customer's premises, the repairs will not be carried out on the equipment at the customer's premises.

The following sentence applies to purchases of equipment for the customer's trade, business or profession. Except as otherwise expressly provided in this Document and to the extent permitted by law, SAGEM Communication Austria GmbH makes no representations or warranties, express or implied, statutory or otherwise, and to such extent, all terms and conditions implied by law are hereby excluded.

This guarantee does not affect the Customer's statutory rights.

## **B** Exclusions From Guarantee

SAGEM Communication Austria GmbH shall have no liability under the guarantee in respect of:

- damage, defects breakdown or malfunction due to:
  - failure to properly follow the installation process and instructions for use; or
  - an external cause to the equipment (including but not limited to, lightning, fire, shock or water damage of any nature); or
  - modifications made without the written approval of SAGEM Communication Austria GmbH; or
  - a failure or neglect to maintain the equipment or inappropriate maintenance; or
  - unsuitable operating conditions, particularly of temperature and humidity; or

- repair or maintenance of the equipment by persons not authorised by SAGEM Communication Austria GmbH; or
- wear and tear from normal daily use of the equipment and its accessories
- damage due to insufficient or bad packaging of equipment when returned to SAGEM Communication Austria GmbH
- supply of new versions of software
- work on any equipment or software modified or added without the prior written consent of SAGEM Communication Austria GmbH
- malfunctions not resulting from the Equipment or from software installed in user workstations for the purpose of use of the equipment,
- communication problems related to an unsuitable environment, including:
  - problems related to access and/or connection to the Internet such as interruptions by access networks or malfunction of the line used by the subscriber or his correspondent
  - transmission faults (for example poor geographical coverage by radio transmitters, interference or poor line quality)
  - the local network fault (wiring, servers, workstations) or the failure of the transmission network
- the normal servicing (as defined in the user guide supplied with the equipment) as well as malfunctioning due to servicing not being carried out, servicing costs are in any event always borne by the customer.

**C** In the cases set forth in § B as well as after expiry of the twelve month guarantee period, the customer must ask SAGEM Communication Austria GmbH for an estimate, and he/she must accept the estimate and agree to pay the charges mentioned in it before returning the equipment to SAGEM Communication Austria GmbH. The repair and delivery costs will be invoiced to the customer.

The foregoing shall apply unless otherwise agreed in writing with the customer and only for the UK. If any provision of this guarantee shall be held to be in whole or in part invalid or illegal due to an obligatory rule applicable to consumers pursuant to their national legislation, such invalidity or illegality shall not impair or affect the remaining provisions or parts of this guarantee.

Please note that only Philips ink cartridges should be used. Your Philips guarantee does not cover damage to your fax machine that may be caused by the use of any other ink cartridges.

# Appendix

## Index

### A

- Activate built-in answering machine 26
- Additional devices 9
- Answering machine
  - built-in 26
  - external 14
- Appendix 34
  - Functionlist 34
  - Guarantee 35
  - Technical data 35

### B

- Basic settings
  - Correction 11
  - Display language 12
  - Function list 34
  - Help function 11
  - Ring signal type 12
  - Time and date 11
  - Volume 12
  - Your name 11
  - Your number 11
- Broadcast 19
- Built-in answering machine 26
  - Controls 3
  - Day/night mode 13
  - Deleting messages 26
  - Display symbol 2
  - Duration of recording 26
  - Economy operating mode 14
  - Forwarding messages 27
  - Function list 34
  - Hands-free operation 17
  - Listening to messages 26
  - Memo 27
  - Play back volume 26
  - Recording a conversation 27
  - Recording a message 26
  - Remote control 28
  - Switching on and off 26
  - VIP code 27

### C

- Calling line identification 17
- Care 31
- Characters 11
- Clean the scanner glass 31
- Code
  - Easylink 30
  - For polling 20
  - For remote control of built-in answering machine 28
  - Service Codes 30
  - To forward messages 27
  - VIP 27
- Connection 6
  - Additional devices 9
  - ISDN 10
  - Private branch exchange 10
  - Problems with the connection 33
  - Telephone socket 6
- Contrast 19
- Copy 21
  - Key 3
- Correct
  - Short dial entry 16
  - Telephone book entry 17
- Creating groups 17
- C key 3
- D**
  - Day 13
    - Display symbol 2
  - Deactivate built-in answering machine 26
  - Delete
    - built-in answering machine messages 26
    - Entry from a group 17
    - Short dial entry 16
    - SMS messages 24
    - Telephone book entry 17
  - Delivery service 29
  - Description of machine 2
  - Dial key 3
    - Hands-free operation 17
    - Speaker 12
  - Disable SMS reception 25
  - Display
    - Language 12
    - Symbols 2

### Document

- Broadcast 19
- Copy 21
- Document jam 29
- Feeding in 18
- Polled reception 20
- Send later 21
- Technical data 35
- Duration of recording 26

### E

- Easylink 30
- Easy Install 10
- Economy operating mode 14
- Entry
  - Correct short dial 16
  - Correct telephone book 17
  - Delete group entry 17
  - Delete short dial 16
  - Delete telephone book 17
  - Store short dial 16
  - Store telephone book 16
- Error report 20
- External answering machine 14
  - Set day/night mode 13
- External memo 27

### F

- Fax 18
  - Broadcast 19
  - Contrast 19
  - Copy 21
  - Fax journal 20
  - Fax reception 18
  - Fax reception with Easylink 30
  - Feeding documents in 18
  - Function list 34
  - Image quality 19
  - Manual fax reception 14
  - Polled reception 20
  - Problems when faxing 33
  - Sending faxes 18
  - Send later 21
  - Silent fax reception 14

- Size compression 20
- Transmission and error reports 20
- Transmission speed 20
- Fax switch 13
  - Function list 34
  - Set day/night mode 13
  - Special settings 14
  - Timer 13
- Feeding documents in 18
- Fine mode
  - Copy 21
  - Display symbol 2
  - Image quality 19
  - Key 3
  - Technical data 35
- Flash times 35
- Forwarding messages 27
  - Function list 34
  - Printout 11, 34

### G

- Group 17
  - Broadcasting to a group 19
- Guarantee 35

### H

- Hands-free 17
  - Key 3
- Handset 6
- Help
  - Easy Install 10
  - Function 11
  - Key 3
- Hints and tips 29
  - Care 31
  - Delivery service 29
  - Document jam 29
  - Easylink 30
  - Paper jam 29
  - Service code 30
  - Troubleshooting 32

### I

- Image quality 19
- Ink film
  - Display symbol 2
  - Load 7
  - Remove 7
- Installation 6
  - Additional devices 9
  - Connection 6
  - Handset 6

- ISDN connection
  - 10
  - Loading paper 8
  - Packaging 6
  - Power supply 7
  - Private branch exchange 10
  - Telephone socket 6
- Internal memo 28
- ISDN connection 10
- J**
- Jam
  - Document jam 29
  - Paper jam 29
- K**
- Keys 3, 11
- L**
- Language
  - Display 12
- Listening to messages 26
- List of numbers 17
- Load
  - Ink film 7
  - Paper 8
- M**
- Making a call 16
- Manual fax reception 14
- Memo 27
  - External memo 27
  - Internal memo 28
- Memory
  - Deleting SMS messages 24
  - Display symbol 2
  - Fax reception without paper 19
- Menu key 3
- N**
- Name
  - Correction 11
  - Enter your name 11
- Night 13
  - Display symbol 2
- Number
  - Correction 11
  - Enter your number 11
  - List of numbers 17
  - Store 16
- O**
- OK key 3
- On/Off key 3
- P**
- Packaging 6
- Paper
  - Fax reception without paper 19
  - Load 8
  - Paper jam 29
  - Remove 9
  - Technical data 35
- Photo mode
  - Copy 21
  - Display symbol 2
  - Image quality 19
  - Key 3
  - Technical data 35
- Play back volume 26
- Play key 3
  - Operation panel 3
- Polling
  - Polled reception 20
  - Quick polling 20
  - send 20
    - with code 20
- Power supply 7
  - Technical data 35
- Printout
  - Easy Install 10
  - Fax journal 20
  - Function list 11
  - Help page 11
  - List of numbers 17
  - Problems 33
  - SMS messages 24
  - Transmission and error report 20
- Private branch exchange 10
- Problems
  - when faxing or printing 33
  - with the connection 33
- Q**
- Quick polling 20
- R**
- Receive faxes 18
  - On an extension phone 18
  - Without paper 19
- Recording
  - A conversation 27
  - A message 26
  - Duration 26
- Rec key 3
- Redial 16
  - Key 3
- Red lamp 3
- Remote control for built-in answering machine 28
- Remove
  - Ink film 7
  - Paper 9
- Resolution
  - Display symbols 2
  - Image quality 19
  - Key 3
  - Technical data 35
- Ringer 12
- Ring signal type 12
- R key 3
- S**
- Same socket 9
- Searching groups 17
- Send
  - a fax 18
  - later 21
  - SMS messages 24
- Separate sockets 10
- Service code 30
- Set day/night mode 13
- Short dial 16
  - Key 3
- Silent
  - fax reception 14
  - operation 14
- Size compression 20
- SMS 23
  - Deleting 24
  - Disable reception 25
  - Display symbol 2
  - Function list 34
  - Key 3
  - Printing 24
  - Sending 24
- Speaker 12
- Special fax switch settings 14
- Start key 3
- Stop key 3
- Store
  - Short dial entry 16
  - Telephone book entry 16
- Switching answering machine on and off 26
- T**
- Technical data 35
- Telephone 16
  - Calling line identification 17
  - Group 17
  - Hands-free operation 17
  - List of numbers 17
  - Making a call 16
  - Redial 16
  - Short dial 16
  - Telephone book 16
    - Key 3
  - Telephone socket
    - Additional devices 9
    - Fax machine 6
  - Timer 13
    - Display symbol 2
  - Time and date 11
  - Tips and hints 29
    - Care 31
    - Delivery service 29
    - Document jam 29
    - Easylink 30
    - Paper jam 29
    - Service code 30
    - Troubleshooting 32
  - Transmission
    - report 20
    - speed 20
  - Troubleshooting 32
- U**
- Use
  - Short dial directory 16
  - Telephone book 16
- V**
- VIP code 27
- Volume
  - of play back messages 26
  - of the ringer 12
  - of the speaker 12

<http://www.sagem.com>

E-Mail: [dti.faxinfoline@sagem.com](mailto:dti.faxinfoline@sagem.com)

United Kingdom

Tel.: 0870 1243 737

Fax: 0870 1240 202

The CE mark confirms that the machine corresponds to the relevant guidelines of the European Union.

#### **DECLARATION OF CONFORMITY (DoC)**

Hereby, **SAGEM Communication Austria GmbH**, declares that this **PHILIPS PPF 531/571/575** is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Should you require a copy of the original DoC, please visit our web site.

This product is intended for use on an analogue public switched network (PSTN) and for use in the country indicated on the label of the box. The usage in other countries could cause malfunction.

For further information please contact your national technical support centre. Initially contact your dealer if problems occur during operation.

 
This operation manual has been printed on chlorine-free, recycled paper, in line with the highest standards of environmental friendliness.

The used cardboard packaging as well as the cardboard protecting your facility at its sides made of waste paper can be recycled like waste paper; corresponding to your country's demands dispose the plastic foils either for recycling or with your rubbish.

This electronic facility contains recyclable material. At the end of use of this facility please inform yourself about the corresponding recycling demands of your country.

Technical changes and errors excepted.

Copyright© 2003 SAGEM Communication Austria GmbH



5103 506 1944.1

**GB/INT**

**M3 PPF 531/571/575**