## COPY SETTING Menu

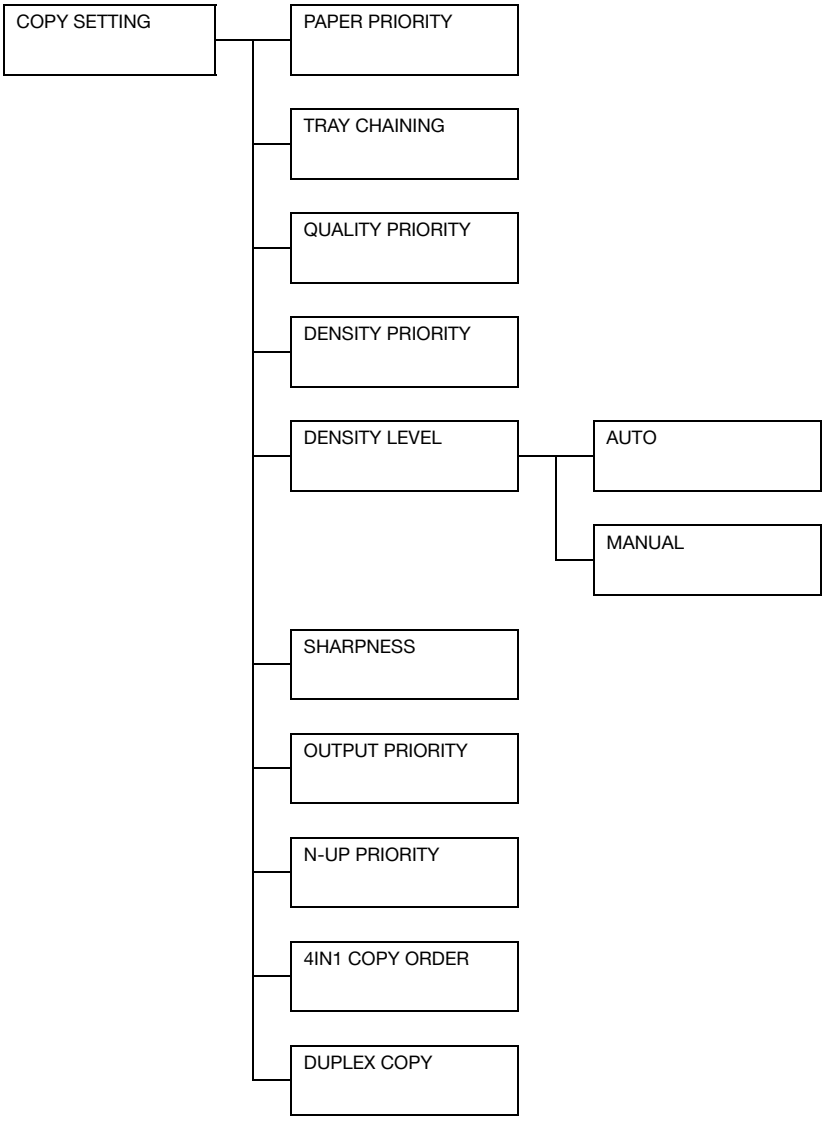

*Manufacturer's default settings appear in bold.*

| | | | |
|---|---|---|---|
| [PAPER PRIORITY] | | Settings | [TRAY1] / **[TRAY2]** / [TRAY3] |
| | | Specify the paper tray that is normally used.<br>*If an optional Lower Feeder Unit PF-P09 is not installed, [TRAY3] does not appear.* | |
| [TRAY CHAINING] | | Settings | **[DISABLE]** / [ENABLE] |
| | | If [ENABLE] is selected and the specified tray runs out of paper during printing, a tray loaded with paper of the same size is automatically selected so printing can continue.<br>If [DISABLE] is selected and the specified tray runs out of paper, printing stops. | |
| [QUALITY PRIORITY] | | Settings | [MIX] / [TEXT] / [PHOTO] / **[FINE/MIX]** / [FINE/TEXT] / [FINE/PHOTO] |
| | | Select the type of document being copied.<br>*When a document is loaded into the ADF, the default setting [MIX] is automatically selected.* | |
| [DENSITY PRIORITY] | | Settings | **[AUTO]** / [MANUAL] |
| | | Select the density that is normally used. | |
| [DENSITY LEVEL] | [AUTO] | Settings | (LIGHT) ◁□□■□□▷ (DARK) |
| | | Adjust the density of the background color. | |
| | [MANUAL] | Settings | (LIGHT) ◁□□□□■□□□□▷ (DARK) |
| | | Specify the default copy density. | |
| [SHARPNESS] | | Settings | (Soft) ◁□□□■□□□▷ (Clear) |
| | | Select the setting for SHARPNESS. | |
| [OUTPUT PRIORITY] | | Settings | **[NON-SORT]** / [SORT] |
| | | Select whether or not to sort copies by sets. | |
| [N-UP PRIORITY] | | Settings | **[1IN1]** / [2IN1] / [4IN1] |
| | | Select the number of document pages to be printed on a single page. | |

| | | |
|---|---|---|
| [4IN1 COPY ORDER] | Settings | **[SIDEWISE]** / [DOWNWARD] |
| | Select the arrangement of scanned documents with 4in1 copying. | |
| [DUPLEX COPY] | Settings | **[OFF]** / [LONG EDGE] / [SHORT EDGE] |
| | Select the default setting for duplex (double-sided) copying.<br>If [OFF] is selected, duplex (double-sided) copying is not performed as a default.<br>If [LONG EDGE] is selected, duplex (double-sided) copying is performed as a default, and the pages are fed out with the binding along the long side.<br>If [SHORT EDGE] is selected, duplex (double-sided) copying is performed as a default, and the pages are fed out with the binding along the short side. | |

**Resolution of QUALITY PRIORITY Settings**

The resolution of each setting is listed below.

| | | | |
|---|---|---|---|
| Original glass | Color | MIX, TEXT, PHOTO | 600 × 300 dpi |
| | | FINE/MIX, FINE/TEXT, FINE/PHOTO | 600 × 600 dpi |
| | Mono-chrome | MIX, TEXT, PHOTO | 600 × 300 dpi |
| | | FINE/MIX, FINE/TEXT, FINE/PHOTO | 600 × 600 dpi |
| ADF | Color | MIX, TEXT, PHOTO | 300 × 300 dpi |
| | | FINE/MIX, FINE/TEXT, FINE/PHOTO | 600 × 300 dpi |
| | Mono-chrome | MIX, TEXT, PHOTO | 600 × 300 dpi |
| | | FINE/MIX, FINE/TEXT, FINE/PHOTO | 600 × 300 dpi |